 


70cm Induction Cooktop

OCI704PPTZ

omega


Designed to Enhance
EST. 1981



Introducing your new
70cm Induction Cooktop


Cooktop Overview

- A. Cooktop Controls
- B. Ø210mm Zone × 1
- C. Ø180mm Zone × 1
- D. Ø160mm Zone × 2

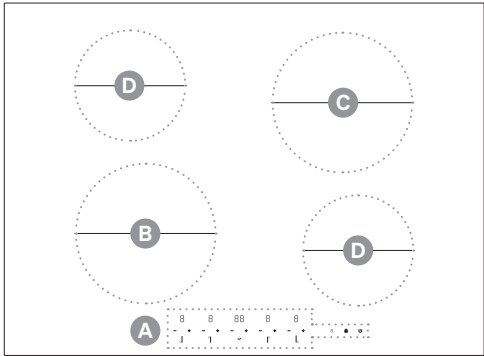

Cut-Out Diagram

For minimum distance requirements and safety advice, please refer to your supplied User Manual, pages 04–08.

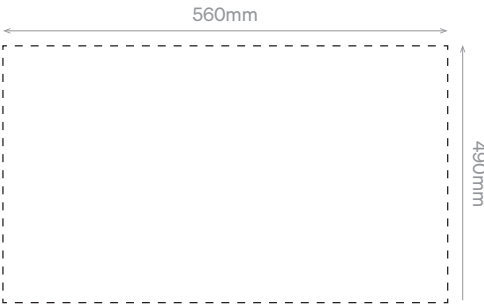

Details

Product Dimensions (W, D, H): 700 × 520 × 58mm
Cut-Out (W, D): 560 × 490mm | Warranty: 3 Years

Cooktop Controls

	Zone Controls Used to increase or decrease the temperature settings for zones.
	Timer Function Use either as a kitchen timer or as a way to automatically shut off zones after a set period of time.
	Boost Function This function increases a zone's temperature to the maximum level for up to 5 minutes.
	Child Safety Lock Prevent use, such as accidental activation by children. If used, all cooktop controls will be disabled except the Power button.
	Power Button Used to easily power the cooktop both on and off.

For a detailed guide on operating your Omega cooktop, please refer to your supplied User Manual, pages 18–28.

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

