

*the Bit More™ Plus*

Instruction Book - BTA435 & BTA440



**Breville®**



## Contents

- 2 Breville Recommends Safety First
- 7 Components
- 9 Functions
- 10 Care & Cleaning

## BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material or promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a table, counter or bench top during operation. Ensure the surface is level, clean and free of water.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.

- Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains.
- Do not use the toaster on sink drainboard.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow bread crumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

- Keep the appliance clean. Follow the cleaning instructions provided in this book.
- Unwind the power cord fully before use.
- Do not let the power cord hang over the edge of a table counter, touch hot surfaces or become knotted.
- Children should be supervised to ensure they do not play with the appliance.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply power cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.

## IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Always turn the power off at the power outlet and then remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.



#### WARNING


Never operate toaster on its side. Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire. This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or fire.

**FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**



## Components

**BTA435 - 2 Slice**

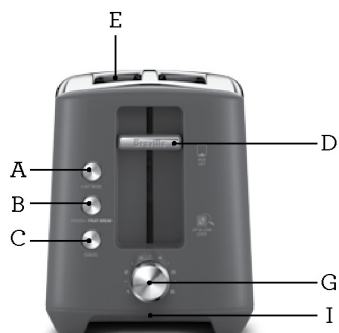

**BTA440 - 4 Slice**



- A. Frozen setting.
- B. 'A Bit More™' and 'Fruit Bread™' setting.
- C. Cancel setting.
- D. High lift lever.
- E. Extra wide and long self-centering slots.

- F. Brushed stainless steel design.
- G. Browning control dial.
- H. Slide out crumb tray.
- I. Power cord storage.



## Functions

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 220-240 volt power outlet and then turn the power on.



### NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

2. For the **Bit More™ Plus 2 slice** place only 1 slice of bread or crumpet or half an English muffin or bagel into each of the toasting slots. Ensure the bread halves are not too large or thick to fit the slots. If less than 2 slices are inserted, the usual browning setting needs to be reduced to avoid the toast burning.

For the **Bit More™ Plus 4 slice** place 2 slices of bread or crumpets or 2 halves of an English muffin or bagel into each of the toasting slots. Ensure the bread halves are not too large or thick to fit the slots. If less than 2 slices are inserted, the usual browning setting needs to be reduced to avoid the toast burning.

3. Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '6' darkest.



### NOTE

When using the toaster for the first time, we suggest toasting the bread on setting 3 or 4.

Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

4. Press the high lift lever down until it locks into position. The toasting cycle will automatically commence.



### NOTE

If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not lock into position.

5. The toaster stops toasting when it has reached the end of the selected browning setting. The toast will automatically rise from the slots. The toasting process can be stopped at any time by pressing the CANCEL button.



### WARNING

Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast, crumpets or muffins or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but can cause electrocution.



## LIFT & LOOK™ FEATURE

This feature can be used to check on the progress of the toasting cycle without interrupting it. Simply raise the high lift lever to check on the browning progress of the toast and lower it down again if you wish to continue to toast.

## HIGH LIFT LEVER

To remove smaller items such as crumpets and muffins, lift the high lift lever approximately 2cm above the starting position. In the unlikely event that the bread, crumpet or muffins become jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

## FROZEN SETTING

### Toasting Frozen Bread

To toast frozen bread, place the bread into the toasting slots, select the browning setting you would normally select if the bread was fresh, lower the 'high lift' lever until it locks into position and then press the frozen button. Pressing the frozen button will automatically extend cooking time of your selection.

## 'A BIT MORE'™ SETTING

### For Extra Toasting

This feature can be selected after or during the toasting cycle.

To use this feature during the toasting cycle, press the 'A Bit More'™ button during the toasting cycle if your bread requires extra toasting in addition to the browning setting you initially selected.

You can also use this feature after the toasting cycle if your toast requires a bit more toasting. Once the toast has popped up after the initial toasting selection has completed, lower the lever back down and then press the 'A Bit More'™ button.

## To toast fruit bread:

1. Place the fruit loaf into the toasting slots.
2. To select the FRUIT LOAF setting, press the A BIT MORE/FRUIT BREAD button twice and the button will illuminate blue.
3. Select the desired setting by adjusting the BROWNING CONTROL Dial.
4. The browning settings range from '1' (lightest) to '5' (darkest).
5. To start the toasting process, press down the lever until it locks into place.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the fruit loaf.

The A BIT MORE/FRUIT BREAD button surround will remain illuminated in blue and should be pressed once to cancel if a subsequent toasting function other than fruit bread is required.

The A BIT MORE/FRUIT BREAD button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.



### NOTE

The 'A Bit More'™ setting will add approximately 30 seconds toasting time to your selected browning setting.



### NOTE

The 'A Bit More'™ setting can be used with either the toast or defrost setting.

## CANCEL BUTTON

### To Stop Toasting

The toasting and defrosting cycles can be cancelled at any time by pressing the cancel button. The toaster will turn off and automatically raise the toast.



## Care & Cleaning

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray (located under the control panel at the front of the toaster) by pulling it outwards. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.



### NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

## STORAGE

Switch toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard.

Do not store anything on top of the toaster.



### WARNING

Do not use the toaster without the slide-out crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.



Notes

## Breville Customer Service Centre

### Australian Customers

**Mail:** Locked Bag 2000  
Botany NSW 1455  
AUSTRALIA

**Phone:** 1300 139 798

**Fax:** (02) 9700 1342

**Email:** Customer Service:  
askus@breville.com.au

**Web:** [www.breville.com.au](http://www.breville.com.au)

### New Zealand Customers

**Mail:** Private Bag 94411  
Botany Manukau 2163  
Auckland NEW ZEALAND

**Phone:** 0800 273 845

**Fax:** 0800 288 513

**Email:** Customer Service:  
askus@breville.co.nz

**Web:** [www.breville.co.nz](http://www.breville.co.nz)

**Breville**  
Thought for food

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.  
Copyright Breville Pty. Ltd. 2016.

Due to continued product improvement, the products illustrated/photographed  
in this brochure may vary slightly from the actual product.

BTA435 / BTA440 A16