

60cm Freestanding Dishwasher

ODWF6014X

omega

Designed to Enhance
EST. 1981

 
 
 
 


Introducing your new 60cm Freestanding Dishwasher

Adjusting the Upper Basket Height

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket by following these steps:

1. Pull out the upper basket.
2. Remove the upper basket.
3. Re-attach the upper basket to upper or lower rollers.
4. Push in the upper basket.

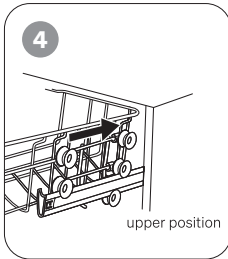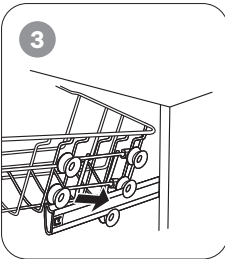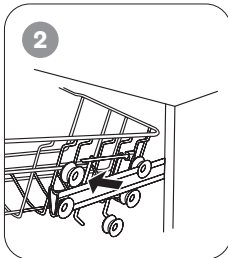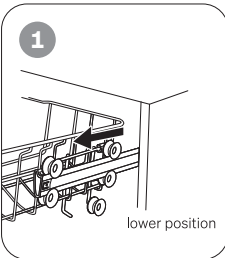

Programs & Additional Functions

	Intensive: For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for some time.
	Heavy: For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.
ECO	ECO: This program is for normally soiled loads at rated capacity.
	90 min: A fast 90 minute daily program for lightly soiled dishes.
	Glass: Suitable for lightly soiled glassware.
	Rapid: A quick 30 minute wash suitable for lightly soiled dishes with no drying stage.
$\frac{1}{2}$	Half Load: When the dishwasher is only at half capacity, you can choose this function to save energy and water.
	Delay Start: Press this button to set the Delay Start time of 3, 6 or 9 hours.
	Extra Dry: The rinse cycle with perform at a higher temp. for a better drying result.
	Child Lock: Press and hold for 3 secs. to lock or unlock the buttons on the control panel

Details

Product Dimensions (W, D, H mm): 598 × 600 × 845
Warranty Period: 3 Years

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

