


46 Bottle Dual Zone Wine Cabinet OCW46DB

omega

Designed to Enhance
EST. 1981



Introducing your new 46 Bottle Wine Cabinet

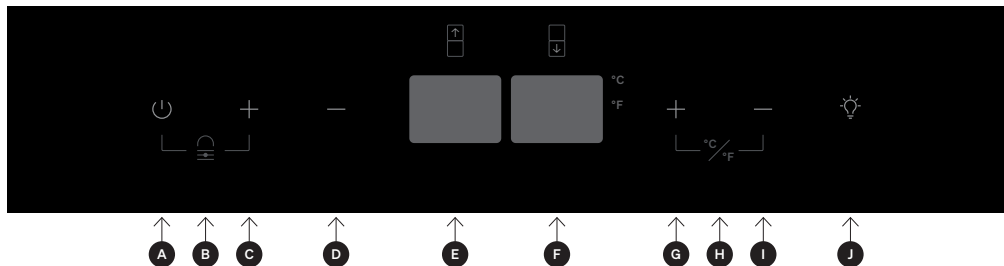

Control Panel

- A. Power Button
- B. Child Lock Button Combination
- C. Upper Zone Plus / Increase Button
- D. Upper Zone Minus / Decrease Button
- E. Upper Zone Temperature Display
- F. Lower Zone Temperature Display
- G. Lower Zone Plus / Increase Button
- H. Temperature Display Button Combination
- I. Lower Zone Minus / Decrease Button
- J. Light Button

Before Using Your Appliance

- Remove all packaging, including foam backing and tape securing shelves.
- Before use, wipe all parts of the unit with a warm, soapy cloth, and rinse and dry thoroughly.
- Before plugging in and switching on the power for the first time, ensure it settled for at least 24 hours

Details

Product Dimensions (W, D, H mm): 595 × 580 × 846–876
Warranty Period: 3 Years

Operating Advice

- The default temperature for the Upper Zone is 8°C.
- The default temperature for the Lower Zone is 12°C.
- Use the Plus / Increase (+) or the Minus / Decrease (-) adjustment buttons to set the desired temperature.
- To turn the light on or off, press the Light button.
- To enable the door-controlled light function, press and hold the Light button for 6 seconds. The display will show 'OP', turning on the door light function.
- To disable the door-controlled light function, press and hold the Light button for 6 seconds. The display will show 'CL', turning off the door light function.
- To switch between Celsius and Fahrenheit temperature display, press the Lower Zone Plus (+) and the Lower Zone Minus (-) buttons simultaneously for 2 seconds. The display will update with the set temperature symbol (°C/°F).
- To lock all of the buttons, press and hold the Power Button and the Upper Plus (+) button simultaneously for 1 second.

Refer to the User Manual, pages 14–15, for a detailed guide on operating your appliance.

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

