


SEIKI | S^{HOME}

10KG FRONT LOAD WASHING MACHINE

SC-1000AU10FLIN

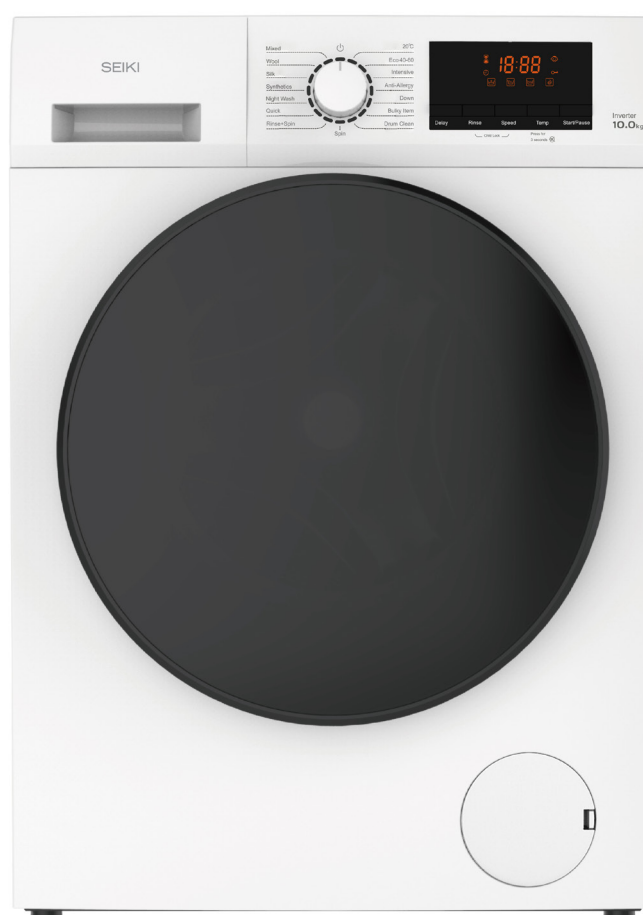

INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	8
Operations	10
Getting Started	14
Instructions	18
Cleaning and Maintenance	20
FAQs	22
Specifications	23

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Washing Machine.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.



WARNING

This symbol indicates when there is a serious risk of injury if you do not pay attention to the warnings.



CAUTION

This symbol indicates when to be careful to avoid a serious risk of injury to oneself or damage to property.

GENERAL SAFETY INSTRUCTIONS (Cont.)

ELECTRICAL SAFETY

- **Voltage:** Plug the appliance to a 220-240V, 50Hz, properly earthed power outlet, it must be in good working order.
- **Power connection:** Do not use an adaptor or an extension cord. Plug the power plug directly into a separate power point that cannot be accidentally turned off, and that is easily accessible so you can switch it off if needed.
- **Power cord:** Do not kink or damage the power supply cord. Make sure it is behind the appliance so no one can step on or place anything on the power supply cord or against it. A damaged power plug may overheat and cause a fire.
- **Damaged cord:** Do not use a cord that shows cracks or damage. Any damage to the cord may cause a short circuit, fire and/or electric shock. Contact our support centre on info@ayonz.com for advice
- **Disconnection:** Never pull the power cord to unplug appliance. Grip the plug and pull straight out from the power point.
- **Electrical work:** If the installation of this appliance requires any electrical work, make sure it is carried out by an electrician.

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

NOTE: This appliance should be installed by an authorized technician else warranty will be void.

INSTALLATION

- The product is heavy, be careful when moving it. To avoid back or other injury, have 2 people lift or mechanical aid when installing.
- When unboxing, thoroughly inspect the appliance carefully for any damage. If there is any damage, do not install the appliance. Contact our support centre on info@ayonz.com for advice.
- While installing the appliance make sure that the power cord is not bent or flattened.
- Make sure to remove all packaging materials such as foams and tapes before installing the appliance.
- Make sure if the machine is to be placed on carpet that the ventilation openings in the base are not obstructed
- Install the washing machine on a flat level and stable ground.

GENERAL SAFETY INSTRUCTIONS (Cont.)

USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly.
- Only for indoor domestic use only. It is not to be used for industrial or commercial use.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- In the process of a hot wash, the door window can become hot. Make sure not to touch it or that no children or pets come into contact with the door window.
- Ensure that emptying all pockets of every item to make sure that there is no hard, sharp objects such as coins, safety pins, bra wires, nails or screws can cause damage to the appliance and has a chance to block the pump.
- Damage or malfunction caused from foreign objects is not covered by your warranty to the appliance.
- Do not operate this appliance outdoors.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.
- Maximum load of washing clothes is 10KG.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
 - Areas for communal use in blocks of flats or in launderettes.

GENERAL SAFETY INSTRUCTIONS (Cont.)


CLEANING AND MAINTENANCE

- Before cleaning or maintenance, always unplug the appliance from the power socket. Make sure you pull by the plug, not the cord as this can damage the power cord and cause a hazard.
- Only the filter requires regular cleaning, everything else is non user-serviceable parts. Do not try to repair, disassemble or modify the appliance.
- Check and clean the filter on a regular basis
- **Service:** Never try to repair, modify or replace any part of the appliance, unless this manual says you can do so. All other servicing is to be done by a qualified technician, or contact our support centre on info@ayonz.com for advice.



IMPORTANT

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.


If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

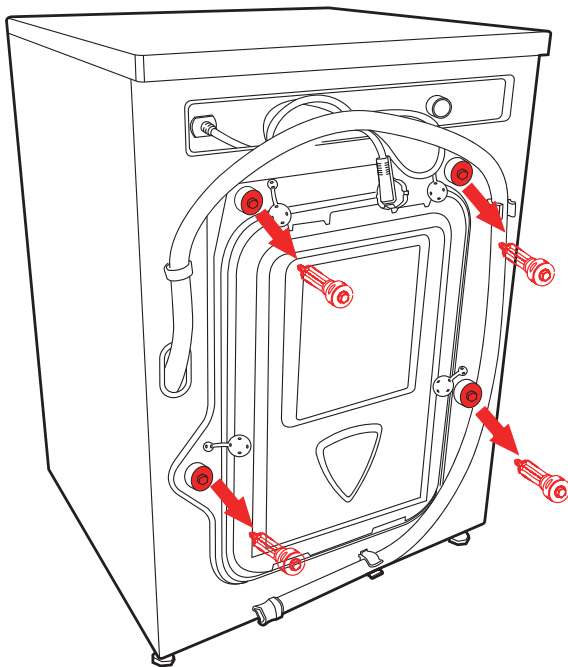

PRODUCT OVERVIEW

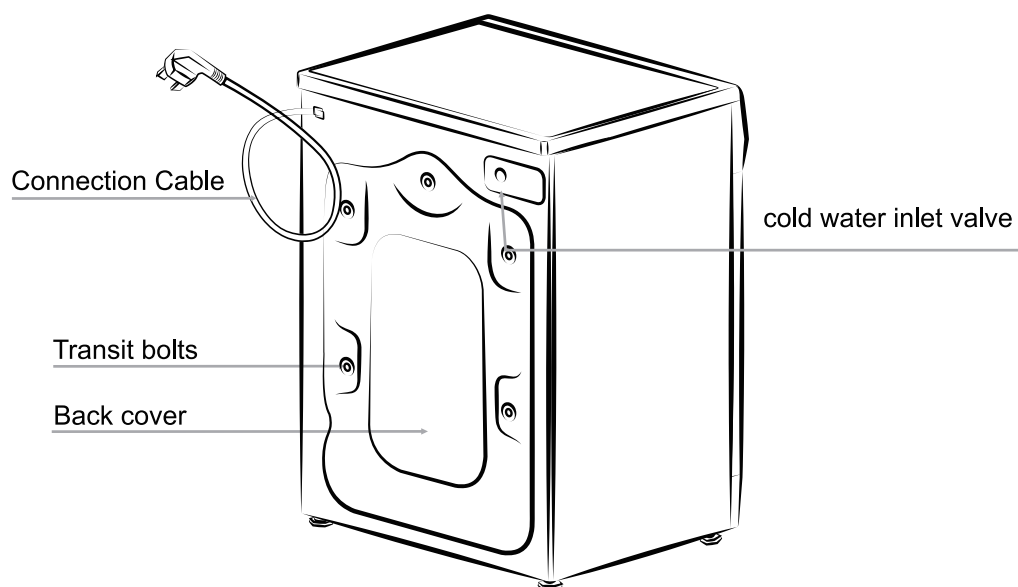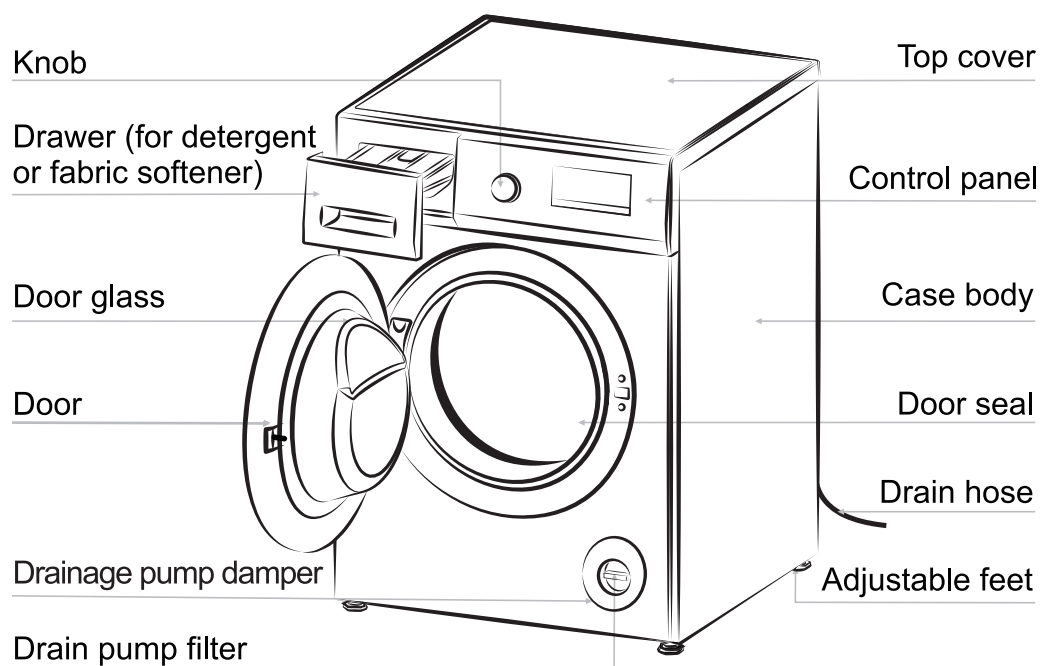


Accessories

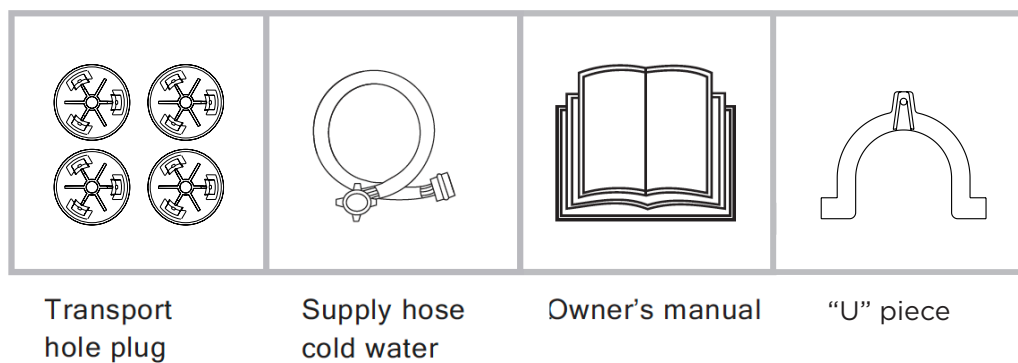

PRODUCT OVERVIEW (Cont.)

CONTROL PANEL

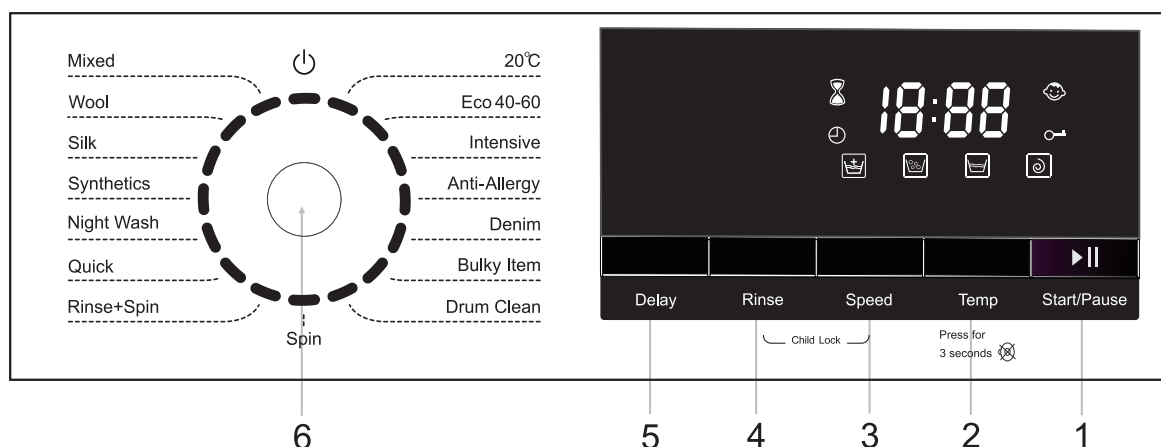


1. **START/PAUSE:** Press this button to start or pause the washing cycle. The door can not be opened when the machine starts.
2. **TEMP:** Press this button repeatedly to change the wash temperature.
3. **SPEED:** Press this button repeatedly to change the spin speed.
4. **RINSE:** Press this button repeatedly to change the rinse times.
5. **DELAY:** Press this button repeatedly to set the delay time of the starting of a wash cycle from 1 hour to 24 hours.
6. **KNOB:** Turn this knob clockwise or anticlockwise to select the required wash program. Once the “Start/Pause” button is pressed and the machine is running, the program can not be changed.

 
Note:

Child lock (“Rinse ” + “Speed”)

The function of “Child lock” is to lock the control panel to prevent the misuse by children .

1.Press the “Rinse” and “Speed” buttons at the same time for 3 seconds.

When the icon “” is lighted up on the screen, the function works. This function can be selected during a washing cycle.

2.When this function works, all keys and knob are not available, except for the knob turn to the position “”.

Mute (“Temp ”)

The function of “Mute” is to close all the prompt tone and alert sounds.

How to start this function: Press the “Temp” button for 3 seconds.

How to cancel this function: Press the “Temp” button for 3 seconds again.

OPERATION

Options and functions for programs

Program	Max Load (kg)	Default Time (min)	Temperature (°C)	Rinse Times	Spin Speed (rpm)
20	10	57	20	2/3/4/5	0/400/600/800/1000/1200
Eco 40-60	10	227	--	3	1400
Intensive	6.5	116	--/20/40/60	2/3/4/5	0/400/600/800/1000/1200/1400
Anti-Allergy	5	131	90	2/3/4/5	0/400/600/800/1000
Denim	5	90	--/20/40	4/5	0/400/600/800
Bulky Item	10	99	--/20/40/60	3/4/5	0/400/600/800/1000/1200/1400
Drum Clean	0	72	60/90	2	600
Spin	10	11	--	—	0/400/600/800/1000/1200/1400
Rinse+Spin	10	16	--	1/2/3/4	0/400/600/800/1000/1200/1400
Quick	7	30	--	2/3/4	0/400/600/800/1000/1200
Night Wash	3	91	--/20/40/60	5	0/400/600/800
Synthetics	5	72	--/20/40/60	2/3/4/5	0/400/600/800/1000/1200
Silk	3.5	48	--/20/40	2/3/4/5	0/400/600
Wool	3.5	50	--/20	2/3/4	0/400/600
Mixed	4.5	73	--/20/40/60	3/4/5	0/400/600/800/1000/1200/1400


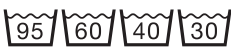



Display icon explanation

	Digital display: This icon shows the time, speed, rinse times, Error code.
	Remaining time: This icon will shining once the display show the remaining time.
	Delay time: This icon will shining once the display show the delay time.
	Child lock: This icon will shining once child lock function is selected, otherwisw will gone.
	Door lock: This icon will shining when door lock is working, otherwise will gone.
	Main wash: The logo will be bright in standby condition when selected the program with main wash function, the logo will be flicked when machine during operation, and the logo will stay bright when machine in pause condition, the logo will be turn off when machine finishes operation.
	Rinse: The logo will be bright in standby condition when selected the program with rinse function, the logo will be flicked when machine during operation, and the logo will stay bright when machine in pause condition, the logo will be turn off when machine finishes operation.
	Final spin: The logo will be bright in standby condition, the logo will be flicked when machine during operation, and the logo will stay bright when machine in pause condition, the logo will be turn off when machine finishes operation.

Note: Once you select the “Night Wash” program, the machine will not execute the last drain unless the “Start/Pause” button is pressed, and the screen show “Iron”. (Note: the max running time of this function is 12 hours . If it exceeds 12 hours, the machine will drain and spin automatically).

OPERATION (Cont.)

Washing programme chart

Programme	Washing symbol	Fabric
20°C		Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.
Eco 40-60		Cottons, linens or cotton mix fabrics, e.g. underwear, T-shirts etc.
Intensive		Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.
Anti-Allergy		Washing clothes at 90°C , which would help for sterilization and disinfection.
Drum Clean		This programme is used for cleaning the drum. Do not put any clothes in the drum.
Spin		Separate spin for cotton and linen items
Rinse+Spin		This programme can be used for rinsing items which can be washed in a Cotton programme. Do not add any detergent.
Quick		Small loads of items which require freshening up and which can be washed in a Cotton programme.
Synthetics		Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts
Wool		Machine-washable or hand-washable wool or wool blend fabrics. If the care label does not specify a temperature, wash using the cold setting. Also suitable for hand-washable silks. Reduce the spin speed.

Note: The machine is fitted with a balance control device, which ensures the machine is stable during the spin. To protect the machine, it will cut in if the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 15 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme.

GETTING STARTED

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. Plastic can be a suffocation hazard for babies and young children, make sure the materials are out of their reach.

TRANSPORTATION



- **CAUTION: VERY HEAVY!** Be sure to team lift the appliance with someone or mechanical aid is required when moving the appliance. Keep the appliance upright as possible when moving the appliance.

GETTING STARTED (Cont.)

LEVELING THE APPLIANCE

IMPORTANT! Make sure to level the appliance carefully with a spirit level to ensure the most accurate leveling of the appliance. This is a must if your floor is unbalanced to level the washing machine.

- Make sure to position the appliance on a level and stable ground. If the floor is uneven you can adjust the feet by twisting the feet. Make sure to slightly incline the appliance first then adjust the leveling feet by twisting it clockwise or counter clockwise depending if you are raising or lowering the feet.

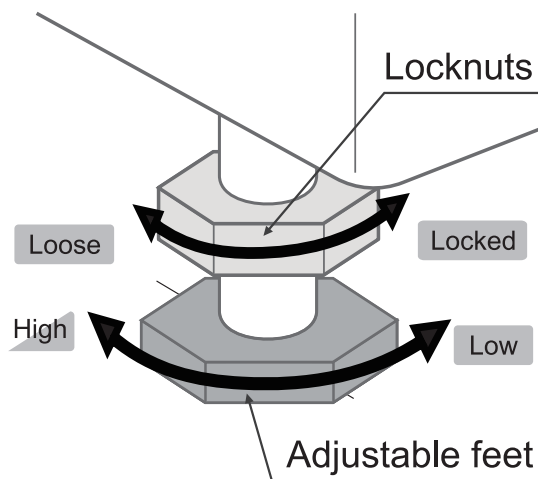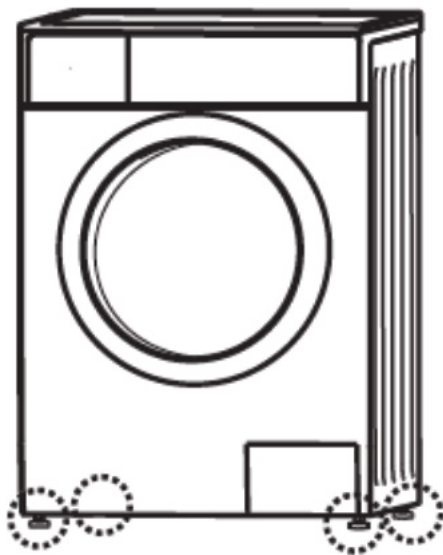

- By placing a spirit level on top of the appliance you can check correctly to aid you in adjusting the feet leveling nuts to adjust the appliance to be completely level.

Note: Make sure to avoid direct sunlight onto the appliance.


GETTING STARTED (Cont.)

CONNECTING THE WATER INLET HOSE


IMPORTANT! To prevent leakage or water damage please follow the below instructions. Do not kink, crush, modify or sever the water inlet hose.

- Connect the inlet pipe as indicated, there are two steps of connecting the inlet pipe.

1. Connect the inlet hose to the machine.

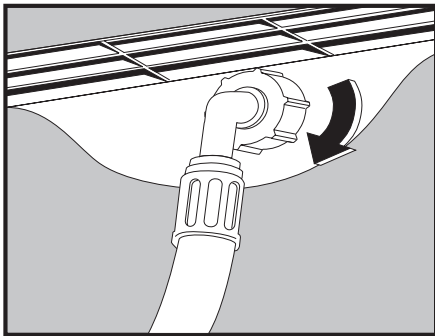

2. Connect the inlet hose to a tap with 3/4" thread.

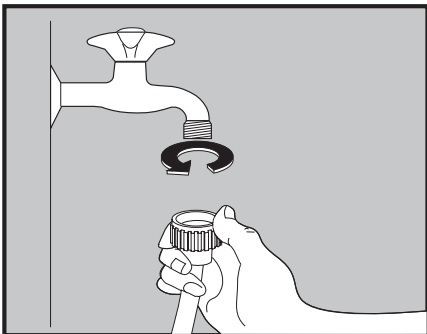

GETTING STARTED (Cont.)


CONNECTING THE DRAIN HOSE

- Do not kink or protract the drain hose. Position the drain hose correctly otherwise damage will result in water leakage.
- Do not bend the drain hose or place it under the washing machine.
- Be sure to only use new hose sets when connecting the Washing Machine. Do not re-use old hoses.

1. Direct into a sink


If the outlet spigot has not been used before, remove any blanking plug that may be in place. Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose to prevent waste from the sink entering the washing machine.

If required, the drain hose can be extended to a length of 4 m.

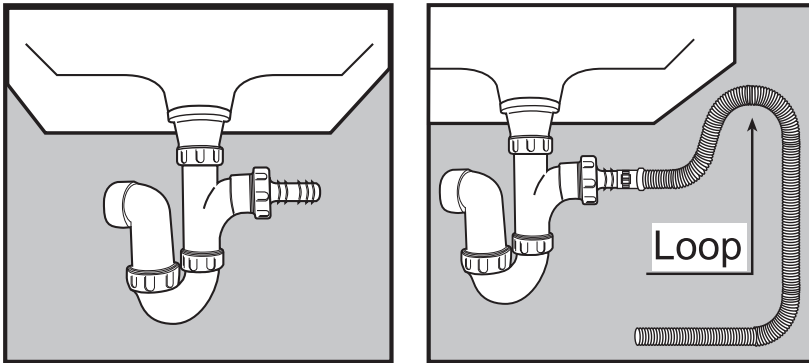

2. Connected securely to a standpipe

Firstly form a hook in the end of the drain hose using the “U” piece supplied. Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm and no less than 60cm above floor level.

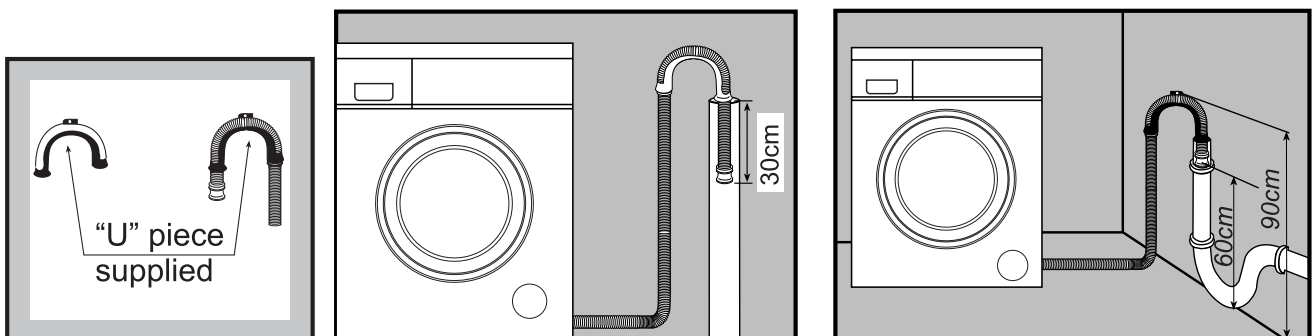


INSTRUCTIONS

BEFORE FIRST USE


- Make sure the washing machine is completely level as to previous instructions on how to level your washing machine.
- Make sure the water inlet hose is installed correctly.
- Make sure that the washing machine is plugged into the power socket.
- When the water inlet hose is installed, turn on the water supply on the tap.

After the above steps have been completed, In a few simple steps you can select the type of wash you want and get started.


- Make sure that the appliance is in a correct working temperature (0-40°C). If the appliance is used under 0°C the inlet valve and draining system may be damaged.
- Make sure that all labels are checked on items if they can be washed.
- Use non-foaming or less-foaming detergents which are more suitable for washing machines to wash correctly.

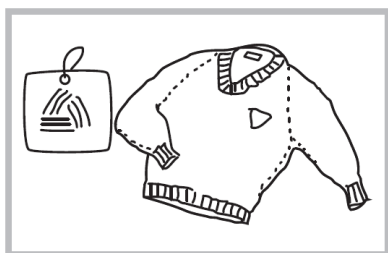


Check the label

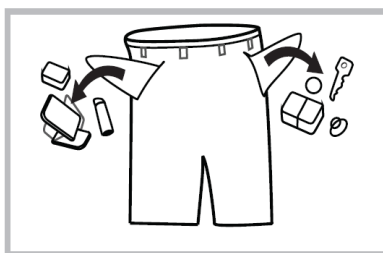


Take out the items out of the pockets

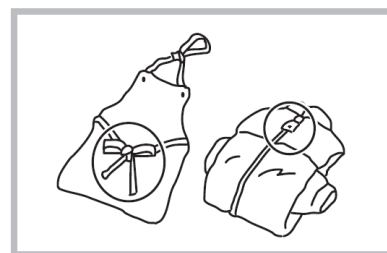


Knot the long strips, zip or button

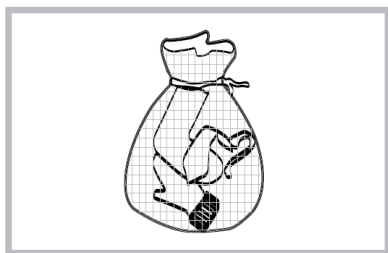

Put small clothes into the pillow slip

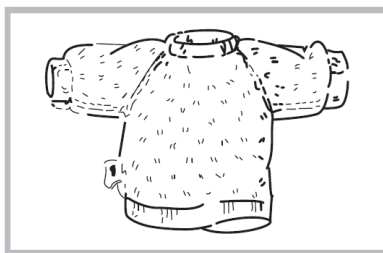

Turn easy-pilling and long-pile fabric inside out

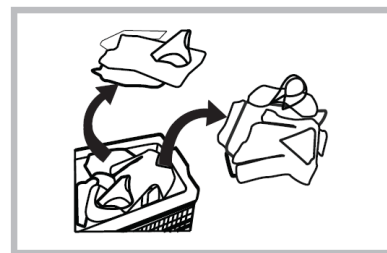

Separate clothes with different textures







WARNING

- Never use the washing machine to wash a single item at any given time, if you need to urgently wash an item, we suggest placing a few clothing items in there.
- Make sure that all labels are checked on items if they can be washed.
- Use non-foaming or less-foaming detergents which are more suitable for washing machines to wash correctly.
- Maximum mass of washing clothes is 10kg

INSTRUCTIONS (Cont.)

WASH CARE SYMBOLS

When choosing a wash program, check for any labels on your clothes and follow the instructions. below are some commonly used symbols.

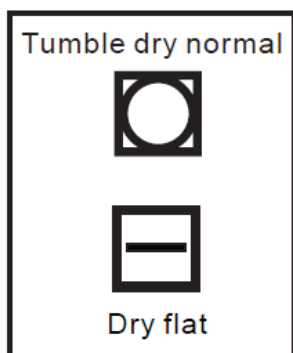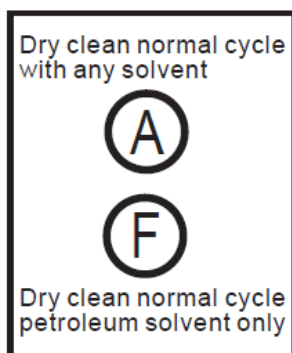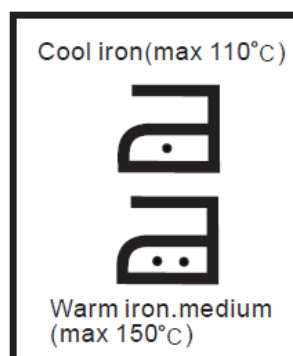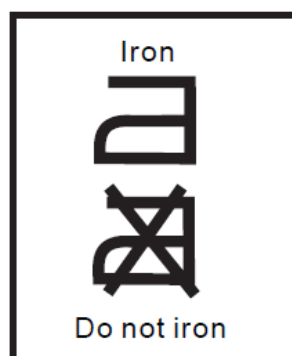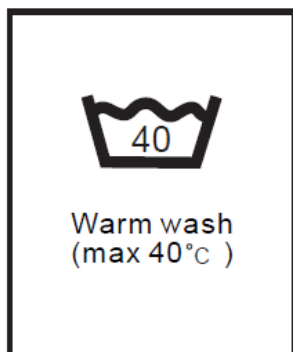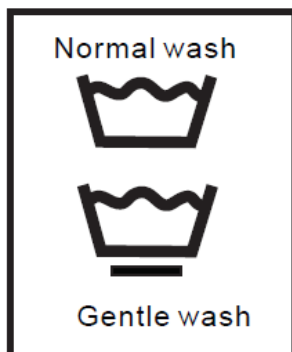

CLEANING AND MAINTENANCE

WARNING:

- Before starting maintenance, ensure that the appliance is unplugged and close the tap.

CLEANING THE CABINET

Proper maintenance on the washing machine can extend its working life.



The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a wet cloth to wipe it off immediately. Make sure no sharp items are used to clean the appliance.

- Use a gentle cloth to wipe off the water and dirt on the surface of the washing machine after every use. Detergent, properllant and other chemicals are not allowed to be used to clean the washing machine surface as it can damage the plastic accessories.

CLEANING THE DRAWER

Remove detergent residues regularly. Clear the drawer following these:


- Pull out the drawer until a resistance is felt. Press down the release catch and at the same time pull the drawer right out of the machine.
- Remove the siphon from compartment and clean it.
- Clean the dispenser using a brush and warm water.

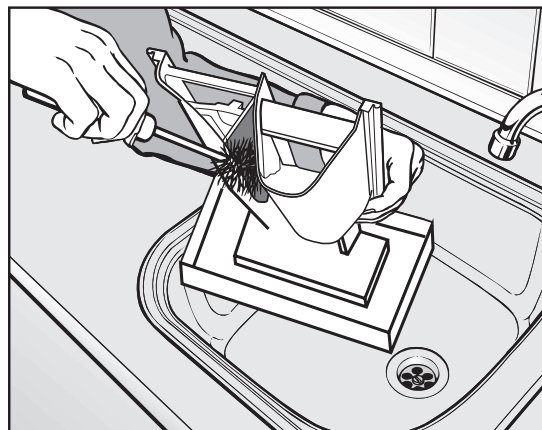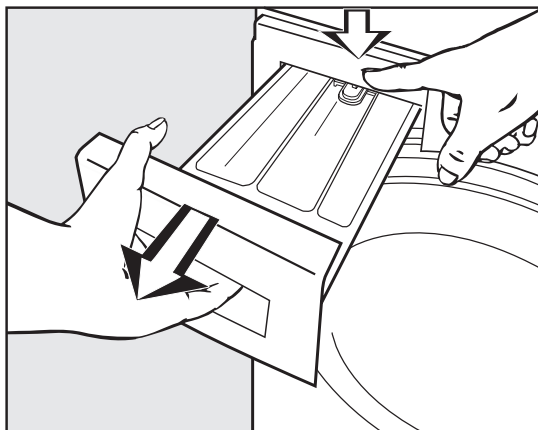

CLEANING AND MAINTENANCE (Cont.)


CLEANING THE DRAWER HOUSING

Use a bottle brush to remove detergent residues inside the drawer housing.

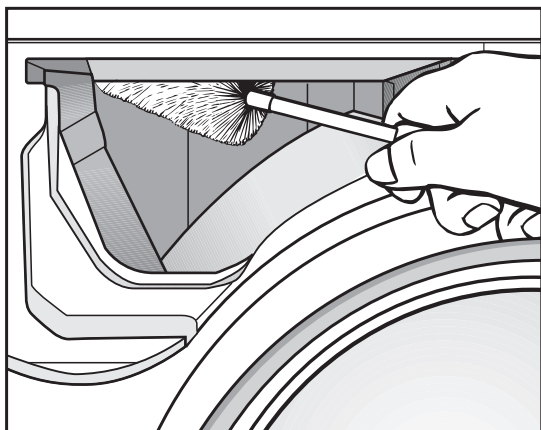

CLEANING THE WATER INLET FILTER

Use pointed nose pliers to withdraw the plastic filter. Clean, put back and secure. These filter should be checked every 6 months or so, or more often if there are frequent interruptions to the water supply.

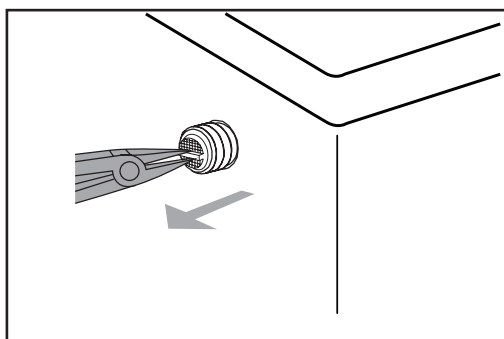



CAUTION!

- Make sure that valve cap is reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

CLEANING AND MAINTENANCE (Cont.)

CLEANING THE DRAIN PUMP FILTER

1. Disconnect the machine from the mains electricity supply and open the lower cover with a screwdriver.
2. Place a container under the pump. Unscrew and remove the filter.
3. Clean the filter carefully.

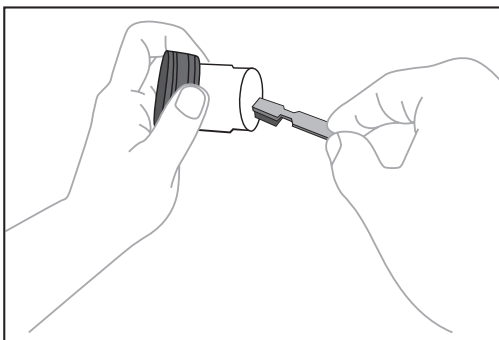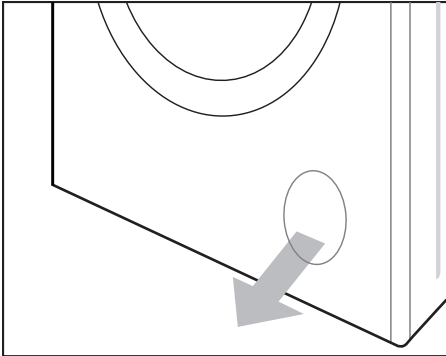

FAQs

Please be sure to contact our call centre on info@ayonz.com if you cannot identify the issue with the below information.

Problem	Error Code	Possible Cause	Solutions
The machine fills overtime.	"E01" is on the screen.	<ol style="list-style-type: none"> 1. The water tap is not open. 2. The drain hose is put down. 3. The water inlet valve is damaged. 	<ol style="list-style-type: none"> 1. Open the water tap. 2. hook up the hose. 3. Change the water inlet valve.
There is a Door lock alarm.	"E02" is on the screen.	<ol style="list-style-type: none"> 1. The door is not locked well. 2. garment is caught between the door and the seal. 3. The door lock is damaged. 	<ol style="list-style-type: none"> 1. Lock the door well. 2. Put the garment into the drum. 3. Change the door lock.
The machine drains overtime.	"E03" is on the screen.	<ol style="list-style-type: none"> 1. The drain hose is squashed or kinked. 2. The drain pump filter is block. 3. The drainage system pipes are blocked. 	<ol style="list-style-type: none"> 1. Check the drain hose. 2. Clean the filter. 3. Check the drainage system and clean it.
Water overflows the machine. / Water sensor works abnormal.	"E04" is on the screen.	<ol style="list-style-type: none"> 1. The water inlet valve is damaged. 2. The connection between the water sensor and wire is not secure. 3. The water sensor is damaged. 	<ol style="list-style-type: none"> 1. Change the water inlet. 2. Check the connection and ensure it is secure. 3. Change the water sensor.
The motor does not work.	"E05" is on the screen.	<ol style="list-style-type: none"> 1. The connection between the motor and wire is not secure. 2. The motor is protected because of over-heat. 3. The motor is damaged. 	<ol style="list-style-type: none"> 1. Check the connection and ensure it is secure. 2. Check if the machine is overloaded. Switch off the machine, and retry when the motor becomes cool. 3. Change the motor.
There is a heating tube fault.	"E06" is on the screen.	<ol style="list-style-type: none"> 1. The connection between the heating tube and wire is not secure. 2. The heating tube is damaged. 	<ol style="list-style-type: none"> 1. Check the connection and ensure it is secure. 2. Change the heating tube.
There is a temperature sensor fault.	"E07" is on the screen.	<ol style="list-style-type: none"> 1. The connection between the temperature sensor and wire is not secure. 2. The temperature sensor is damaged. 	<ol style="list-style-type: none"> 1. Check the connection and ensure it is secure. 2. Change the temperature sensor.

SPECIFICATIONS

Power Supply	220-240V ~ 50Hz
Standard Water Pressure	0.02MPa~0.8MPa
Washing Capacity	10KG
Rated Power	2000W
Dimensions	595 x 665 x 845 mm (W x D x H)
Weight	Net: 64kg
	Gross: 69kg



CUSTOMER HELPLINE:

info@ayonz.com
02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd