

nutribullet

POWER CORE™

BLENDER



User guide

! **WARNING!** Reduce the risk of serious injury by reading the User Guide to your nutribullet Power Core™ Blender before operating. Save these instructions. Ensure anyone who uses the nutribullet® knows how to do so safely.

IMPORTANT SAFEGUARDS

When operating your nutribullet® device, remember: **SAFETY COMES FIRST. WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:**

⚠ WARNING! To avoid the risk of serious injury, death, property damage, or damage to your device, carefully read all instructions before operating your nutribullet® device. When using any electrical appliance, basic safety precautions should always be observed, including the important information in this User Guide.

Ensure that anyone using this nutribullet® product understands the health and safety information included in this User Guide, a well as any additional safety or usage instructions provided. Each person using a device should carefully read the User Guide in its entirety to become familiar with the safe operation of the unit.

! SAVE THESE INSTRUCTIONS! • FOR HOUSEHOLD USE ONLY

GENERAL USE AND SAFETY:

Failure to follow all instructions regarding the use of your nutribullet® device may result in serious personal injury, death, or property damage. Be aware of possible hazards when using or storing your nutribullet®.

⚠ WARNING! EXTREME CAUTION SHOULD BE EXERCISED WHEN USING HOT, WARM, OR CARBONATED INGREDIENTS IN THE PITCHER. ALWAYS MAKE SURE THE VENTED PITCHER LID IS SECURED ONTO THE PITCHER BEFORE OPERATING, AND EXERCISE CAUTION WHEN OPENING THE PITCHER LID, HOT STEAM OR SPLATTERING OF HOT INGREDIENTS MAY OCCUR.

⚠ WARNING! NEVER BLEND FOR LONGER THAN ONE MINUTE. DO NOT RUN CONSECUTIVE BLENDING CYCLES THAT EXCEED ONE MINUTE TOTAL.

- Do not use the nutribullet® for other than its intended purpose.
- Do not leave or put non-food items in any of the attachments when blending. Doing so may damage the unit or crack or shatter the attachment, resulting in bodily injury or property damage.
- Close supervision is necessary when any appliance is used by or near children to ensure they do not play with the appliance. Keep cord out of reach of children.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- Do not place or operate your nutribullet® on uneven or unstable surfaces.
- The risk of fire, shock, or damage to nutribullet® during cleaning can be reduced by taking the following precautions: Turn off your device and unplug it before cleaning.
 - Only clean the exterior of your device.
 - Clean your device with a dry cloth.
- To protect against the risk of electrical shock, **DO NOT** immerse the Motor Base in water or other liquids. The Motor Base should only be cleaned by gently wiping with a clean cloth.
- Do not place any nutribullet® part or accessory in a microwave, conventional oven, air fryer, or stovetop pot, or immerse in boiling water, as this will damage the part.
- Do not place or operate your nutribullet® on or near a hot gas or electric burner, or in a heated oven.

⚠ WARNING! NEVER WASH YOUR NUTRIBULLET® PARTS OR ACCESSORIES USING THE SANITISE OR HEAT CYCLE OF YOUR DISHWASHER. DOING SO CAN WARP THE PART, WHICH CAN CREATE HAZARDOUS CONDITIONS DURING USE THAT MAY RESULT IN BODILY INJURY OR PROPERTY DAMAGE.

- **NEVER** place any nutribullet® parts or accessories in the freezer. Do not use nutribullet® parts and accessories as storage containers in the freezer.
- Never attempt to defeat any safety interlock mechanisms on the appliance.
- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Do not operate your nutribullet® if any of the parts and accessories are or appear to be damaged in any manner that may impair proper function or create a safety hazard. If you suspect your nutribullet® parts and/or accessories may be damaged, contact Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633.**
- Do not use parts, accessories or attachments from other manufacturers, different models of nutribullet® or magic bullet® products, or canning jars. Use of parts, accessories or attachments **NOT** specifically designed for your particular nutribullet® device may damage your unit or cause serious bodily injury,

fire, or electric shock. Use only genuine nutribullet® attachments/ accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.

• **DO NOT USE OUTDOORS.**

• **ALWAYS UNPLUG YOUR NUTRIBULLET® WHEN NOT IN USE.**

• To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

• Always **POWER OFF** and **UNPLUG** the unit and wait until the blades come to a complete stop before assembling, disassembling, changing accessories, or cleaning.

USING THE BLENDING PITCHER:

⚠ **WARNING! AFFIX THE PITCHER LID TO THE PITCHER BEFORE BLENDING TO PREVENT INGREDIENTS FROM SPLASHING.**

⚠ **WARNING! ALWAYS AFFIX THE VENTED PITCHER LID TO THE BLENDING PITCHER WITH THE LID CAP ON AND CLOSED BEFORE BLENDING TO PREVENT HOT INGREDIENTS FROM SPLATTERING, WHICH MAY CAUSE BURNS, BODILY INJURIES, OR PROPERTY DAMAGE.**

⚠ **WARNING! AFTER BLENDING HOT INGREDIENTS OR LIQUIDS, EXERCISE CAUTION WHEN OPENING THE PITCHER LID, AND BE MINDFUL OF ESCAPING HOT STEAM OR SPLATTERING HOT INGREDIENTS.**

- Do not overfill the Blending Pitcher beyond the MAX line.
- Do not use the Blending Pitcher if you detect cracking, cloudiness, Blades do not turn smoothly, or other damage. Visit bulletbrands.com.au / bulletbrands.co.nz or contact customer service to purchase a new Blending Pitcher.

• Pressure generated from blending hot liquids may push the Lid off the Pitcher. To prevent possible burn injuries, do not fill the pitcher beyond the max line and check that the vent slots are not obstructed.

⚠ **WARNING! TO INCORPORATE INGREDIENTS DURING BLENDING, CAREFULLY OPEN THE LID CAP FROM THE PITCHER LID AND GENTLY POUR OR DROP INGREDIENTS INTO THE MIXTURE. BE ESPECIALLY MINDFUL WHEN ADDING TO HOT INGREDIENTS AND LIQUIDS, AS ESCAPING STEAM OR SPLATTERS MAY PRESENT A RISK OF INJURY.**

• When using manual speeds, start blending on the LOW setting and, once ingredients are integrated, adjust the speed as needed.

BLENDING PITCHER SAFETY:

- Never run the appliance while empty.
- Proper Blending Pitcher use is important for the safe operation of your nutribullet®. Using the Blending Pitcher inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.

• Only operate the Blending Pitcher with the Pitcher Lid and Lid Cap securely locked in place.

• Before blending, check that the vent slots on the Pitcher Lid are clear and unobstructed. Clogged or obstructed vent slots will pressurise the contents, which can cause the release of hot steam or the splattering of ingredients upon opening.

• For recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, then attach the Pitcher Lid and begin blending. Once the ingredients are mixed well, twist open the Vented Lid Cap and carefully pour or drop ingredients into the blended mixture. If the blended mixture is hot or warm, use caution and open the Vented Lid Cap slowly, being mindful of escaping hot steam or the splattering of hot ingredients. Always reinstall the Vented Lid Cap after adding ingredients.

• **NEVER** place hands or use utensils such as spatulas, spoons, or other tools that may make contact with the spinning blades while in operation. Doing so can damage the unit, shatter the Blending Pitcher, or cause severe bodily harm.

• **ALWAYS** turn off and unplug the blender ensuring that the blades are fully stopped before adjusting ingredients. Use a long spoon, silicone spatula or wooden spoon to scrape down the sides, pushing the ingredients toward the center. Avoid using sharp or metallic objects that may contact

or damage the blades. **REMOVE ALL UTENSILS AND NON-FOOD ITEMS FROM THE PITCHER BEFORE OPERATING TO PREVENT BODILY INJURY, OR DAMAGE TO THE BLADE OR PITCHER.** before replacing the Pitcher Lid and Lid Cap and resuming blending.

GENERAL BLADE SAFETY:

⚠ **WARNING! BLADES ARE SHARP! HANDLE WITH CARE AND DO NOT TOUCH THE SHARP EDGES OF THE BLADES THAT MAY CAUSE INJURIES. NON-FOOD ITEMS OR HARD INGREDIENTS MAY DAMAGE THE BLADES. ROUTINELY INSPECT THE BLADES AND DISCONTINUE USE IF THE BLADES ARE DAMAGED OR DO NOT FREELY ROTATE. CONTINUED USE WITH DAMAGED BLADES OR USE INCONSISTENT WITH THESE INSTRUCTIONS MAY RESULT IN BODILY INJURY, PROPERTY DAMAGE, OR DAMAGE TO YOUR UNIT.**

⚠ **WARNING! NEVER STORE THE UNIT WITH THE BLADE EXPOSED. ALWAYS COVER THE BLADE WITH THE PITCHER LID. EXPOSED BLADES PRESENT A LACERATION HAZARD THAT MAY CAUSE SEVERE PERSONAL INJURY.**

• **DO NOT** crush ice by itself. Your nutribullet® is not intended to be used as an ice crusher. Doing so may shatter the Pitcher, causing injury or damage. Always add a sufficient amount of liquid ingredients when blending.

• Do not overload the Pitcher, as this may prevent the blade from spinning.

- **DO NOT** blend stone fruit in this appliance unless pits/seeds have been removed. Fruit pits may damage the Pitcher, potentially resulting in shattering and personal injury.
- Do not attempt to grind dry ingredients such as grains, cereal, or coffee, as this may overheat the motor and/or damage the blades.
- **AVOID CONTACT WITH MOVING PARTS!** Keep hands and utensils out of and away from the blade to reduce the risk of severe personal injury or damage to the unit.
- **NEVER** use the heat/sanitise cycle when cleaning the Pitcher, Lid, Lid Cap or accessories in the dishwasher.
- Periodically inspect your blade. If the blades do not rotate freely or are damaged, immediately discontinue use and contact Customer Service.
- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® unit, or present safety hazards that may cause personal injury or damage. When ordering replacement parts, always use genuine nutribullet® parts.

ELECTRICAL SAFETY:

Modification, improper use, and failure to follow the instructions for proper setup, use, and care of your nutribullet® device can increase the risk of property

damage, serious personal injury, or death.

⚠ WARNING! NEVER USE THE UNIT IN COUNTRIES OR LOCATIONS WITH INCOMPATIBLE ELECTRICAL SPECIFICATIONS OR PLUG TYPES.

⚠ WARNING! DO NOT USE THE UNIT WITH A VOLTAGE CONVERTER DEVICE, AS IT MAY CAUSE ELECTRICAL SHORTING, FIRE, OR ELECTRIC SHOCK, ALL OF WHICH MAY RESULT IN PERSONAL INJURY OR PRODUCT DAMAGE.

• **HOW TO CLEAN UP A SPILL:**

STEP 1: The most important thing is to **UNPLUG** the Motor Base before cleaning!

STEP 2: Make sure the Blade is not attached to the Motor Base.

STEP 3: Use a damp cloth to wipe down the inside and outside of the Motor Base.

- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be powered or operated through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not use the cord, plug, or Motor Base if it has been immersed in water or other liquids. Any significant spillage on, under, or around the Motor Base should be cleaned and dried before plugging in and using the unit.
- Do not modify the electrical cord in any way.
- Do not attempt to plug the unit into an electrical outlet with wet hands.
- Avoid contact with the control panel display when the power icon is illuminated to prevent inadvertent and unexpected operation of the unit.
- Do not modify the electrical cord in any way.
- Do not operate any unit with a damaged electrical cord or plug. The electrical cord and plug are not suitable for replacement. If damaged, the appliance should be replaced. Please visit **bulletbrands.com.au / bulletbrands.co.nz** to contact customer service.
- Do not allow or place the electrical cord near or touching any hot surfaces, heat source, or flame, including the stove.
- Do not allow the electrical cord to hang over the edge of a table or counter.
- Do not pull, twist, or damage the power cord.
- Overloading the unit with ice or other ingredients may overheat the motor and engage the thermal breaker. If the internal thermal breaker shuts off the motor, unplug the Motor Base and let it cool for an hour before attempting to use it again. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down.
- Always **UNPLUG** your nutribullet® when it is not in use, and when assembling, disassembling, changing accessories, or cleaning.
- **NEVER** pull the power cord to remove the plug from the outlet. To unplug, grasp the plug and pull from the outlet.

- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® or present safety hazards that may cause personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz**.

VENTILATION:

- **NEVER** obstruct the ventilation openings on the bottom of the Motor Base of your nutribullet® device. Openings on the bottom of the Motor Base should be free of dust and lint and never obstructed. Obstructing the ventilation openings may overheat the motor, presenting a fire hazard that may cause property damage, serious personal injury, or death.
- **ALWAYS** operate the nutribullet® on a level surface, leaving unobstructed space beneath and around the Motor Base to permit proper air circulation. Slots on the bottom of the Motor Base are provided for ventilation to ensure reliable operation and to prevent the motor from overheating.
- **NEVER** place your nutribullet® on top of flammable materials such as newspapers, tablecloths, napkins, dishtowels, placemats, or similar materials.

MEDICAL SAFETY:

⚠ WARNING! ALWAYS USE CAUTION WHEN COMBINING INGREDIENTS. FAILURE TO FOLLOW NUTRIBULLET® PRODUCT WARNINGS CAN RESULT IN SERIOUS BODILY INJURY; NEVER FOLLOW PREPARATION INSTRUCTIONS THAT CONTRADICT NUTRIBULLET® PRODUCT WARNINGS. CERTAIN INGREDIENTS UNDERGO CHEMICAL REACTIONS WHEN MIXED. BLENDING SUCH INGREDIENTS IN YOUR NUTRIBULLET® CAN CAUSE PRESSURISATION THAT MAY RESULT IN SERIOUS BODILY INJURY OR PROPERTY DAMAGE. FOR THE SAFE OPERATION OF YOUR UNIT, ALWAYS BE MINDFUL WHEN COMBINING INGREDIENTS, AND BE SURE TO FOLLOW ALL NUTRIBULLET® PRODUCT WARNINGS AS WRITTEN IN THE PRODUCT USER GUIDE.

- Always consult your physician regarding health and nutrition concerns and advice. The information contained in this User Guide, any accompanied guide, and/or online recipes are general suggestions and ideals and are not meant to replace the advice of your physician.

CARE AND MAINTENANCE:

- **ALWAYS** follow recommended maintenance and care instructions in the User Guide.

⚠ WARNING! NEVER OPERATE YOUR NUTRIBULLET® WITH DAMAGED COMPONENTS WHICH CAN PRESENT SAFETY HAZARDS THAT MAY CAUSE PERSONAL INJURY OR DAMAGE. IF YOUR NUTRIBULLET® MALFUNCTIONS IN ANY WAY, IMMEDIATELY DISCONTINUE USE AND IF YOU HAVE COMMENTS, QUESTIONS, OR CONCERNS PLEASE VISIT BULLETBRANDS.COM.AU / BULLETBRANDS.CO.NZ OR CONTACT CUSTOMER SERVICE.

**! SAVE THESE !
! INSTRUCTIONS !**

Contents



 
- 02 Important safeguards**
- 12 What's included**
- 13 Assembly guide**
- 14 Control panel**
- 16 Blending with the Pitcher**
 - 16 First-time setup
 - 17 Using the blender
- 20 Care & maintenance**
 - 21 Replacement parts
- 22 nutribullet Power Core™ Blender one-year limited warranty**

Thank you for purchasing the nutribullet Power Core™ Blender.

What's included



motor base

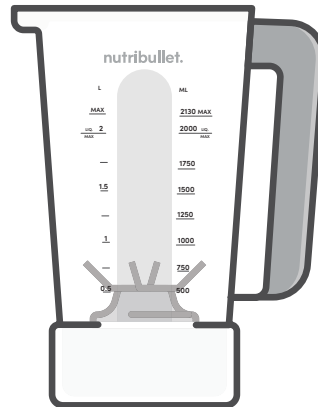


2.1L pitcher



pitcher lid with vented lid cap

 Assembly guide

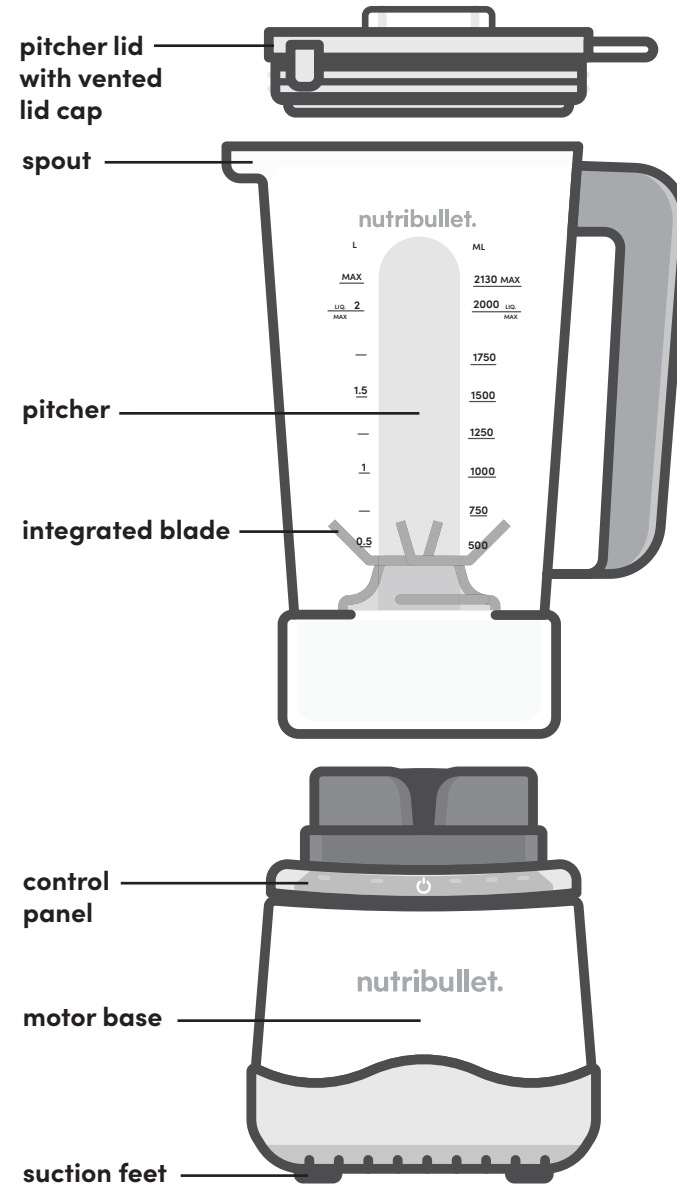


Product configurations may vary. To see our full list of nutribullet® accessories, please visit bulletbrands.com.au / bulletbrands.co.nz

Control panel



POWER BUTTON

 The **Power Button**  turns the blender on (light indicates power). Always turn off and unplug the blender when not in use.

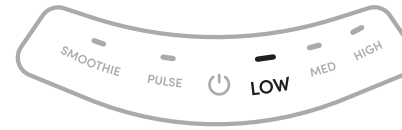

LOW

For mixing thin batters, gravies, and marinades, scrambling eggs, and processing cooked foods or raw fruits.



SMOOTHIE

Automatically blends ingredients in a timed cycle to create smooth, consistent drinks.



MED

For creaming soups, mixing dips, grinding nuts, and blending sauces, spreads, drinks, and milkshakes.



PULSE

For controlled chopping and processing.



HIGH

For liquefying thick mixtures and blending frozen fruits or vegetables.

Blending with the Pitcher

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Plug in the Motor Base before use.
- Always attach the Pitcher Lid and Vented Lid Cap before blending.
- Never run the blender while empty.
- Do not put accessories in the microwave.
- Never leave the blender running unattended.

- Be extra careful when blending hot liquids.

WARNING! STEAM AND SPLASHES CAN BURN YOU.

ALWAYS KEEP THE PITCHER LID AND VENTED LID CAP ON WHEN BLENDING HOT LIQUIDS.

FILL ONLY UP TO THE MAX LINES FOR LIQUIDS AND SOLIDS.

START AT LOW SPEED, THEN INCREASE ONCE THE MIXTURE IS SMOOTH AND STEADY.

First-time setup



- 1** Unbox the **Motor Base** and all attachments; place them on a flat, dry surface.



- 2** Rinse all detachable parts. All parts except the **Motor Base** are dishwasher-safe or can be hand-washed with warm, soapy water. Wipe the **Motor Base** with a damp cloth.

Using the blender



 
- 1** Set the **Motor Base** on a clean, dry, level surface. Ensure the rubber suction feet are secured to the surface for stability.



- 2** Place the **Pitcher** on a clean, dry, level surface. Add ingredients without exceeding the MAX line.




- 3** Attach the **Pitcher Lid** with cap to the **Pitcher**, aligning the rear loop (opposite the spout) with the handle.

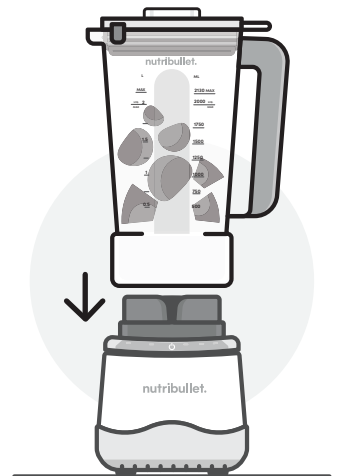


- 4** Lower the **Pitcher** straight down into the **Motor Base**, aligning the **Pitcher's** studs with the grooves on the base. There will be a click when the **Pitcher** is placed onto the **Motor Base**.



 
- 5** Plug the power cord into an electrical outlet.

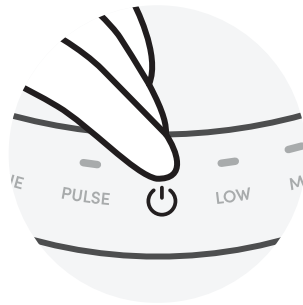

 
- 6** Press **⏻** to turn on the blender. The blending mode lights will illuminate in sequence from left to right when the unit is powered on.

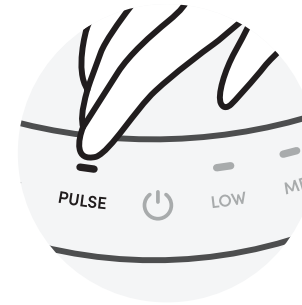

 - 8** For pulsing, press and hold the **PULSE** button. The blender runs only while the button is held, giving you precise control over blending time and texture.

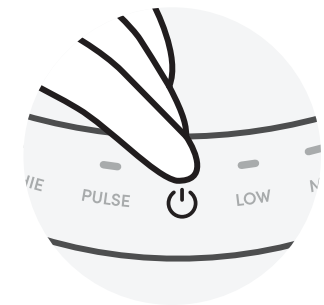

 - 9** Press the **⏻** to stop blending and wait for the blades to stop spinning. The **⏻** will remain lit, indicating the blender is in idle mode.

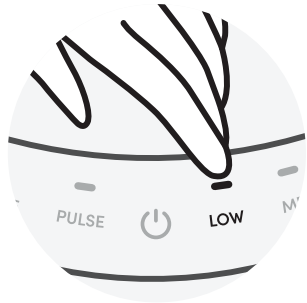


- 7** To blend continuously, locate your desired speed on the **Control Panel** and press once to start. The blender will run at that speed until paused or stopped, and you can change speeds at any time.

To pause, press the selected speed button again: the setting light will turn off and the unit will stop until you choose a new setting to resume.

NOTE: To add ingredients while blending, select **LOW** speed, then remove **ONLY** the plastic cap from the **Vented Lid** to open the vent, leaving the rest of the Lid attached. Add ingredients through the opening, then replace the **Cap** and increase speed as desired. Never add items through the vented opening when blending hot ingredients.

NOTE: If you need to dislodge or redistribute stuck ingredients at any point during blending, be sure to completely power off and unplug the unit, ensuring blades have come to a full stop, before opening the **Lid** and loosening ingredients. If using a utensil to dislodge ingredients, ensure it is completely removed from the pitcher before reattaching the **Lid** and resuming blending. If sticking persists, add more liquid to your blend.

 
! WARNING! Blades are sharp. Never put your hands in the Pitcher.

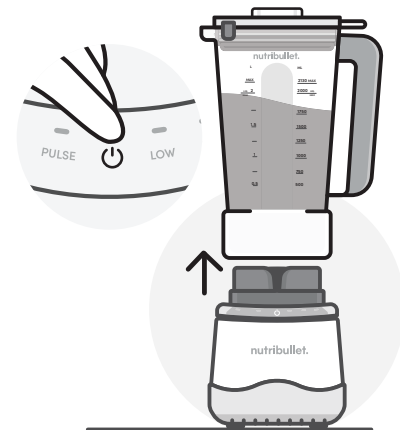


- 10** Press **⏻** again to power off the unit completely before lifting the **Pitcher** from the **Motor Base**. Remove the **Lid** before pouring your mixture into your desired vessel.

Care & maintenance

 CLEANING YOUR NUTRIBULLET POWER CORE™ BLENDER:

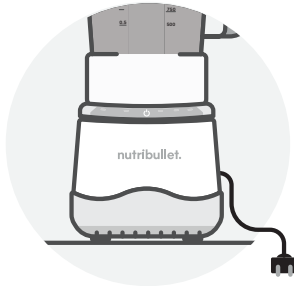

 - 1 Always turn off and unplug the blender before touching it. Wait until all parts stop moving.

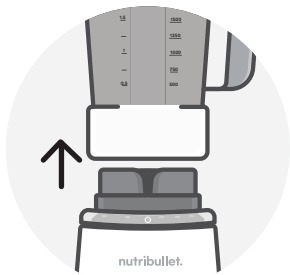

- 2 Remove the **Pitcher** from the **Motor Base**.



- 2 Clean the **Motor Base** and **Pitcher** as described in the cleaning instructions.

MOTOR BASE:

- Do not take apart the Motor Base.
- Wipe the Motor Base with a sponge or cloth and warm soapy water damp cloth.
- For leaks, wipe with a damp sponge and warm water.
- Use a small brush if needed to clean around the actuator system.

! WARNING: NEVER PUT THE MOTOR BASE IN WATER.

PITCHER:

! WARNING: BLADES ARE SHARP! HANDLE WITH CARE.

- The Pitcher is dishwasher-safe. Rinse and scrub with a dish brush before placing it in the dishwasher.
- **DO NOT** use the sanitize cycle; high heat can warp the plastic.
- You can also hand-wash with soap and water. Scrub stuck-on food with a brush or sponge.

- Regularly check for cracks or damage. Replace if damaged.
- Never use a Pitcher that doesn't fit correctly on the Motor Base. This can cause separation and injury.

STORAGE:

- Store the Pitcher upright with the Lid on.
- Do not put anything on top of the Lid.
- Keep other parts in a safe place where they won't get damaged.

Replacement parts

To order additional parts and accessories, please visit our website at: bulletbrands.com.au / bulletbrands.co.nz or feel free to contact Customer Service.

Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.

CDB  GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB 
GROUP

NEW ZEALAND
PO Box 100-707
NSMC
Auckland 0745
0800 232633
bulletbrands.co.nz

AUSTRALIA
PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

nutribullet® is a registered trademark of CapBran Holdings, LLC.
Copyright © 2026 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90024, USA. Made in China.

Capital Brands Distribution, LLC | All rights reserved.

nutribullet® and the nutribullet® logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NBF07100_260225