

The Hisense logo is displayed in a bold, white, sans-serif font. The background of the top half of the cover features a dark grey gradient with three broad, sweeping, light grey curved lines that originate from the left and curve towards the right, creating a sense of motion and modernity.

# Hisense

life reimagined

## USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

HRTF496SW

English

## Contents

Safety and warning information.....	2	Cleaning and care.....	16
Installing your new appliance.....	7	Helpful hints and tips.....	18
Description of the appliance.....	10	Troubleshooting.....	20
Display controls.....	11	Disposal of the appliance.....	21
Using your appliance.....	13		



## Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

### Safety for children and others who are vulnerable people

#### ● According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

#### ● According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person being responsible for their safety.

- Keep all packaging away from children as there is risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

## General safety



- **WARNING** —This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- **WARNING** —When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING** —Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

### Replacing the illuminating lamps

- **WARNING**—The illuminating lamps must not be replaced by the user! If the illuminating lamps are damaged, contact the customer helpline for assistance. This warning is only for refrigerators that contain illuminating lamps.

### Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

**WARNING** — Refrigerators contain refrigerant and gases in the insulation.

Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

It is hazardous for anyone other than an Authorized Service Person to service this appliance. In Queensland the Authorized Service Person Must hold a Gas Work Authorized Certificate for hydrocarbon refrigerants to carry out servicing or repairs which involve removal of covers.



### **WARNING: risk of fire**

If the refrigerant circuit is damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire, and/or electric shock.



### **Electrical safety**

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the mains plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of a common one with other electrical appliances. Its plug must match the socket with ground wire.

### **Daily use**

- Do not store flammable gas or liquids in the appliance, There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e. g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturers' instructions.

- The appliance manufacturer's storage recommendations should be strictly adhered to. Refer to the relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause ice burns if consumed straight from the freezer compartment.
- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so as not to ignite the appliance.
- As described in this instruction, the appliance is used for storing food and / or beverages in ordinary household. You should take care when moving it as the appliance is heavy.
- Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or ice burns.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause ice burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
- **Note:**  
When one of the two doors is open, the LED lights are on. When the two doors keep the same angle for 10 seconds, the LED lights go out.

### **Caution!**

#### **Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do use a plastic scraper instead of a sharp objects to remove frost from the appliance.

#### **● Installation Cautions!**

- For electrical connection, follow the instructions given in this manual carefully. Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case, keep the packing.
- It is recommended to wait at least four hours before connecting the appliance to allow the oil to flow back into the compressor.
- Adequate air circulation should be around the appliance, lacking this leads

to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.

- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

### **Service**

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or a competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts should be used:
  - 1) If the appliance is frost free.
  - 2) If the appliance contains freezer compartment.


## Installing your new appliance

Before using the appliance for the first time, you should be informed of the following tips.

### Warning!

For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator.

The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.


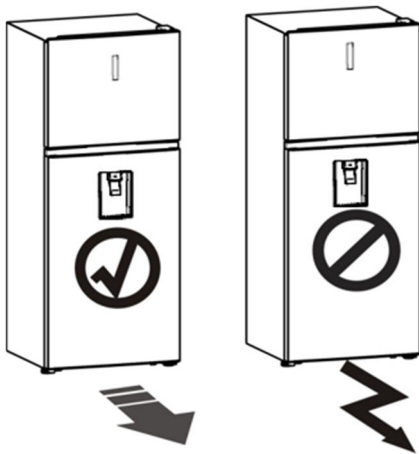


### Ventilation of appliance



In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

**Suggest:** It is recommended to have 50mm of space from the back to the wall, at least 100mm from its top, at least 50mm its side to the wall and a clear space in front to allow to open the doors to open 130°, as shown in following diagrams.

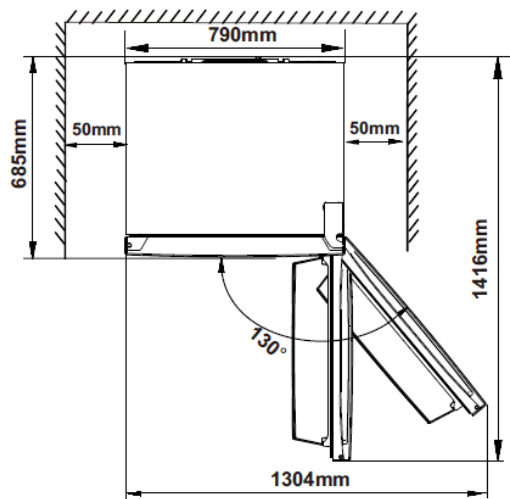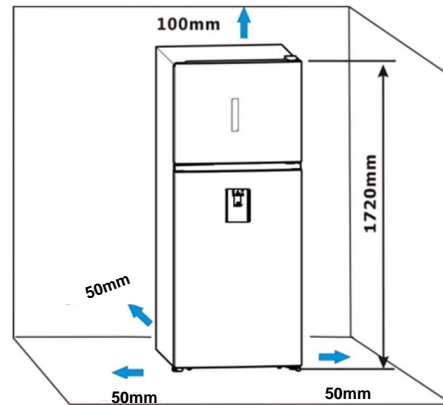

### Note:



● This appliance performs well within the climate class from SN to T shown in the table below. It may not work properly if being left at a temperature above or below the indicated range for a long period of time.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Locate your appliance in a dry place to avoid high moisture.
- Keep the appliance away from direct sunlight, rain or frost. Locate the appliance away from heat sources such as stoves, fires or heaters.

### Leveling of appliance

- For sufficient leveling and air circulating in the lower rear section of the appliance, the bottom feet may need to be adjusted. You can adjust them manually by hand or by a suitable spanner.
- To allow the doors to close by itself, tilt the top backwards by 10-15mm.

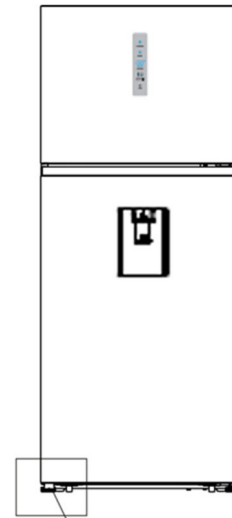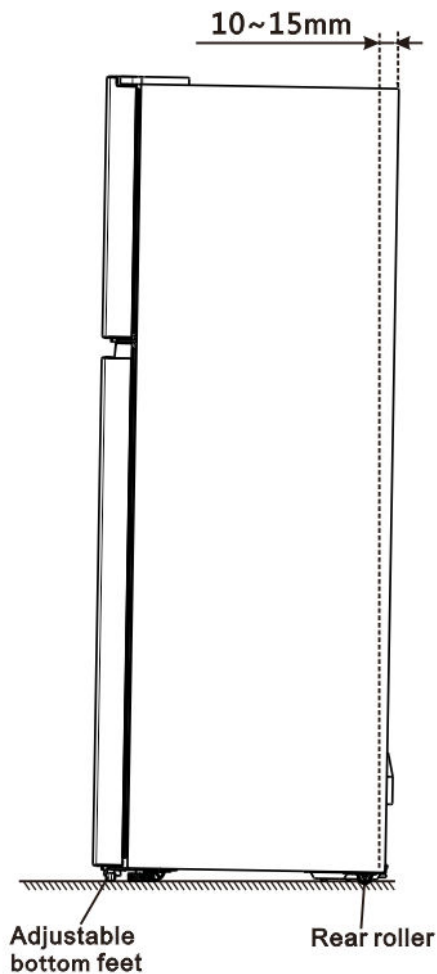

Adjustable bottom feet


### Note:

- If required you may lay the refrigerator on its back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the backboard of the refrigerator.
- There is no need to install these accessories under normal usage. Only under the extreme circumstances, empty the cabinet while load on the freezer door and the fridge door separately with heavy weight, at the same time opening the two doors about 90 degree, the refrigerator may lean forward. Then the rubber supporting pad should be fastened to the




lower base cover to steady this appliance.




1. Tilt the appliance to find screw hole on the left of lower base cover.

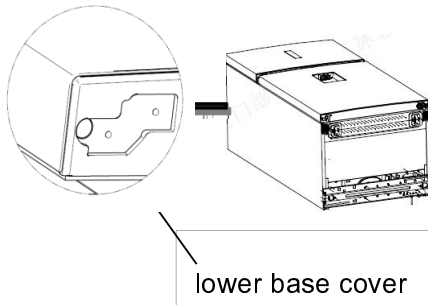

2. Put screws into the holes of the rubber supporting pad.

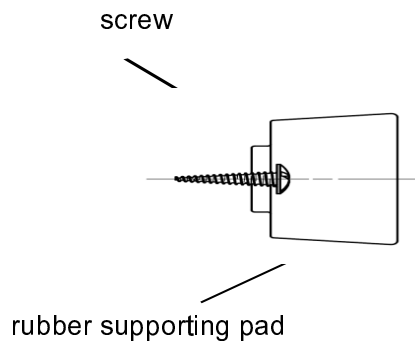


3. Make screws in alignment with the holes on the lower base cover. Use a cross screwdriver (self-provided) to firmly fix the rubber supporting pad on the base cover.

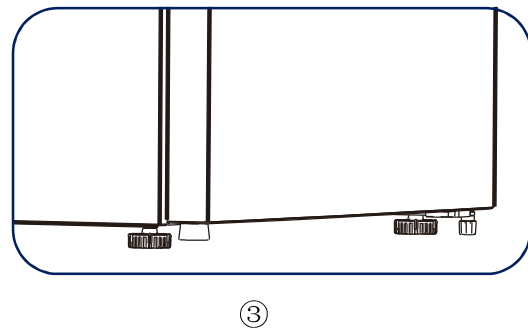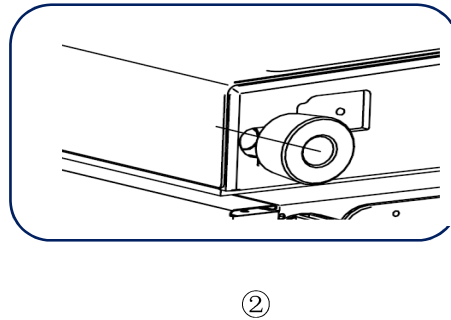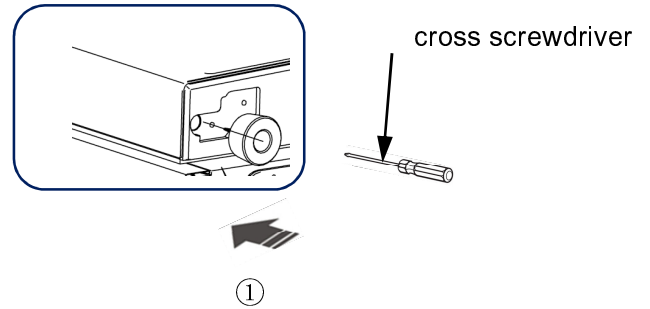

## Description of the appliance

1. Freezer wind channel
2. Freezer shell
3. Ice tray part (optional)
4. Fresh Zone cover
5. Fresh Zone  
(“4” and “5” Or Fridge shell)
6. Fridge wind channel
7. Fridge shell
8. Crisper cover
9. Crisper
10. Adjustable bottom feet
11. Freezer door gasket
12. Freezer door
13. Freezer door rack
14. Fridge door gasket
15. Water tank
16. Small door rack
17. Lower door rack
18. Fridge door

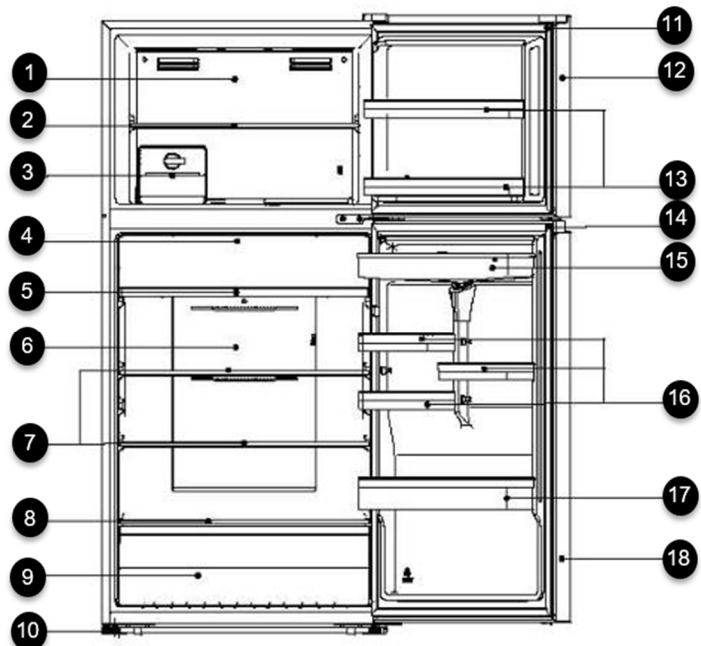


### Note !

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and methods of use remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers and baskets in their original position as shown in the illustration above.

## Display controls

### Display panel on door

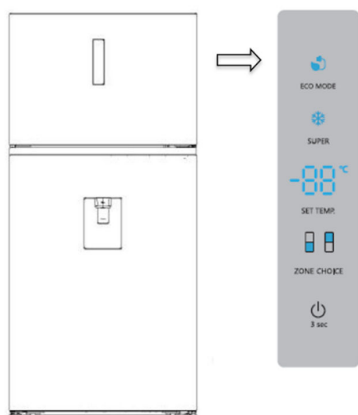

Display panel on door

### Controlling the temperature


We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 4 °C, if you want to change the temperature, follow the instructions below.

 
#### Caution !

When you set the temperature, what you set is an average temperature for the whole refrigerator cabinet. The


temperature inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place it. Ambient temperature may also affect the actual temperature inside the appliance.


### Fridge

● Press “ZONE CHOICE”, the “” light will turn on. Then press “SET TEMP.”, you can set the fridge temperature between 2 °C and 8 °C as needed, and the display panel will display corresponding values according to the following sequence.



### Freezer

 ● Press “ZONE CHOICE”, the “” light turns on. Then press “SET TEMP.”, you can set freezer temperature between -14 °C and -24 °C as needed, and the display panel will display corresponding values according to the following sequence.



### Super Freezer ( )

Super Freezer will quickly lower the temperature within the freezer so food will freeze faster. In this way, vitamins and nutrients of fresh food can be locked in and food can be kept fresh for a longer time.

● You can press “SUPER” to get into the super freezer mode.

● When the superfreeze Mode is selected, the light will be illuminated and the freezer temperature will be set at -24 °C.

● In case of the maximum amount of food to be frozen, please wait about 24 hours.

● Superfreeze automatically switches off after 52 hours and then the freezer temperature setting will revert back to the previous setting.

### Ecoenergy


This function makes the freezer work in a power saving mode which is useful for reducing energy consumption when you are away.


● You can press “ECO MODE” to get into the economic energy mode.

● When economic energy mode is activated, the light will be illuminated, The freezer temperature will be set at -17 °C and the fridge temperature will be set at 6 °C.

**Switch**

You can switch on or switch off your appliance by pressing this button.

- Press “” for 3 seconds, after a buzzer sounds, the digital light will show “OFF”, and the temperature display will be turned off.

- Press “” for 3 seconds, after a buzzer sounds, the temperature display will be turned on.

**Alarm**

- If the fridge door is left open for more than 2 minutes, the door alarm will sound. In case of door alarm, a buzzer will sound 3 times every 1 minute and the alarm will stop automatically after 8 minutes.

- To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can also be cleared by closing the door.

## Using your appliance

Your appliance has the accessories as the “Description of the appliance” showed in general , with this part's instructions you can have the right way to use them. We recommend that you read through them carefully before using the appliance.

### Door rack

● It is suitable for the storage of eggs, canned liquid, bottled drinks and packed food, etc. Do not place too many heavy items on the racks.

● Small rack on lower door can be placed at different heights according to your requirements . Please take food off the shelf before lifting the rack vertically to reposition it.

### Shelf in Refrigerator chamber

1. There are shelves in the refrigerator chamber , and they can be taken out to be cleaned.



2. The crisper is suitable for storage of vegetables and fruit, etc.



### Freezer chamber

The freezer chamber is suitable for storage of foods required to be frozen, such as meat, ice ,etc.

**Caution !** Do not close the refrigerator door when installing the deep bracket, it may damage the unit.

Ensure that drink bottles are not left in the freezer for a longer time than needed as freezing liquid may cause the bottle to break.


### Water Dispenser

The water dispenser, located in the fridge door, is used for storing drinking water. This feature provides chilled water easily without opening the refrigerator . You should be informed of the following tips.

#### ● Before using

Please clean the water dispenser parts before using this appliance for the first time .

- 1 . Hold two sides of the water tank tightly, then pull up the water tank carefully by shaking up and down.
2. Unscrew the head , clean it, then clean the inside of the water tank (including both large and small lids).
3. Dry it in a natural way or using a dryer.

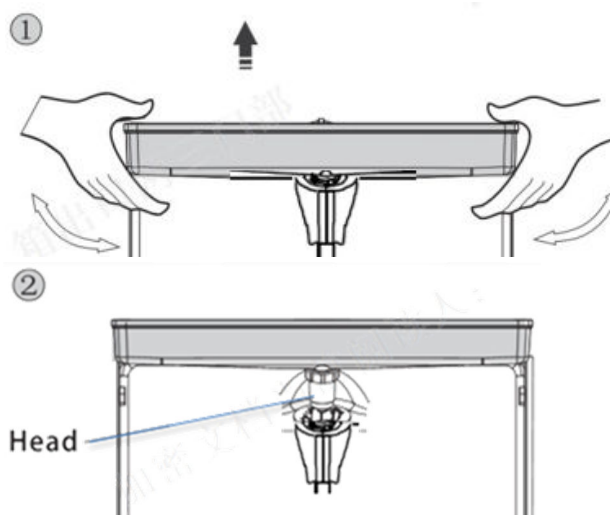


#### ● Assembling

After cleaning, please assemble these parts together, in reverse sequence of the cleaning procedure; and fit them on the door

according to the following procedure:

1. Insert the head into the hole on the door.
2. Fit the tank along the guides on the door.
3. Press down on both sides of the tank.
4. When you hear a click sound, it means the installation is completed.

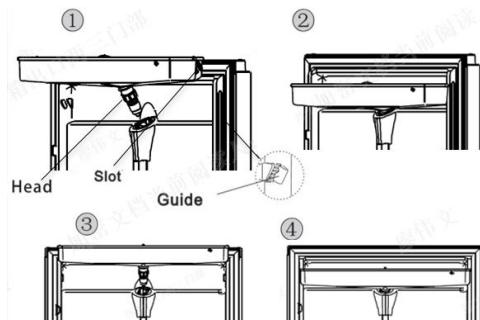

### ●Filling water

Before you fill the drinking water into the water tank, ensure that the water tank is steady and in a correct position.


#### Caution!

Fill with water up to 4L (which is suggested), and not above the level.

Otherwise, it may overflow when the lid is close.

We recommend that you fill the water by the following ways:

1. Remove the small lid and fill water from the inlet of the large lid.
2. Remove the cover of the tank, and then fill water inside directly.

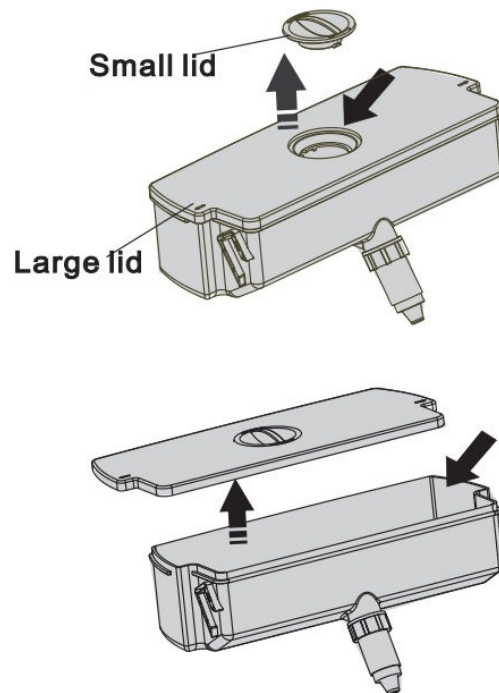


#### Warning!

- Don't touch other parts when filling water, which may cause water leakage.
- Other beverages (milk, juice, carbonated beverage etc.) are not suggested to be filled in except for drinking water, especially those beverages including particles (which may result in function failure).
- Hot water is forbidden to be filled into the water tank.

#### ● Receiving water

You should use the correct cups to receive water under the water dispenser.

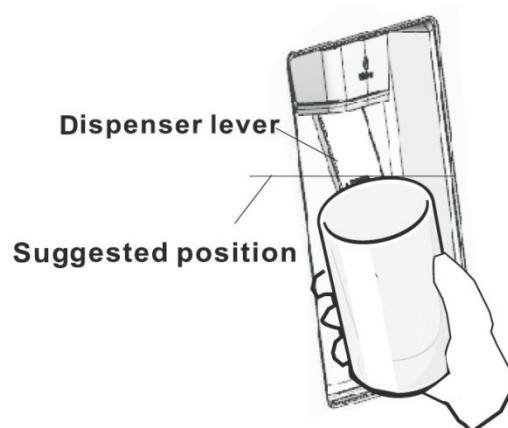

**Warning!**

--Don't push the water dispenser lever forward without a cup below since it may cause water spilling.


--To avoid cold air leaking out from the cabinet, keep the water dispenser parts (especially the water storage box and head) still installed even if the water dispenser is out of use.

**●Cleaning**

1. Put the water tank out of the door carefully, and then wash the tank, lid, and head lightly in water.

2. After you have successfully cleaned the appliance, you should dry it by natural drying or using the dryer.

3. If you have used the water dispenser for many times, the water in the receiving tank may fall to the floor, which may make your floor wet, and you should clean the tank with dry towel regularly before overflow.

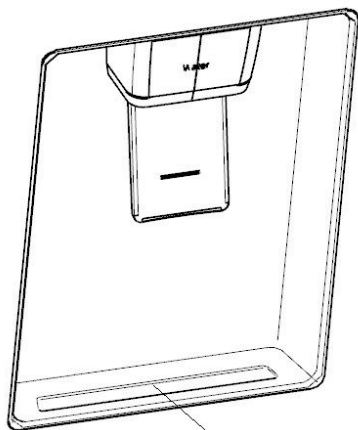

**Receiving tank**

## Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly (at least every two months).

### Warning!


The appliance must not be connected to the mains during cleaning as there is a danger of electric shock!

Before cleaning, switch the appliance off and remove the plug from the mains socket.

### Exterior cleaning

Wipe the control panel with a clean, soft cloth.

- Spray water on the cleaning cloth instead of spraying directly on the surface of the appliance. This helps to ensure that moisture is evenly distributed on the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent, and then dry them with a soft cloth.

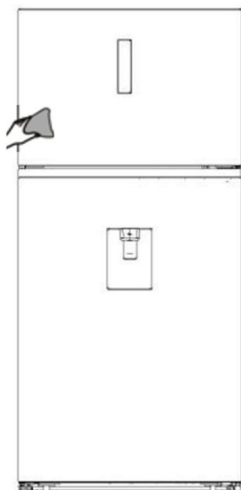


### Caution!

- Don't use sharp objects for cleaning as they may scratch the surface.
- Don't use Thinner, Car detergent, Clorox, etheral oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the

appliance and may cause fire.

### Interior cleaning

You should clean the inside of the appliance regularly. It will be easier to clean when the food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water a wrung-out sponge or cloth. Dry the shelves and baskets completely before replacing them. Thoroughly dry all surfaces and removable parts before putting them back in place.

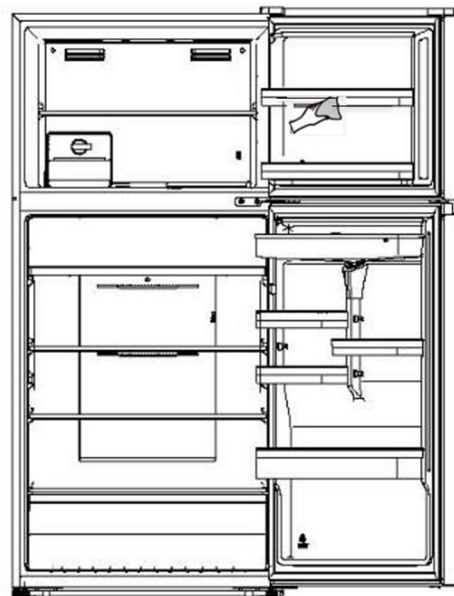

Although this appliance automatically defrosts, a layer of frost may form on the inner wall of the freezer if the freezer door is opened frequently or for too long. If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follows:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.
2. When defrosting is completed, clean your freezer as described above.



**Caution!**

Do not use sharp objects to remove frost from the freezer compartment. Only when the interior is completely dry should the appliance be turned on again and plugged back into the mains socket.

**Door seals cleaning**

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Clean the seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

**Caution !** Only when the door seals are completely dry should the appliance be powered on.

**Replacing the LED light:**

Warning:

The LED light should be replaced by a competent person. If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the steps below can be followed:

1. Unplug your appliance.
2. Remove the light cover by pushing up and out.
3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
4. Replace LED light and clip it correctly in place.

## Helpful hints and tips

### Energy saving tips

We recommend that you follow the tips below to save energy :

- Try to avoid keeping the door open for a long time in order to save energy. Ensure that the appliance is away from any sources of heat ( direct sunlight, electric oven or cooker etc.).
- Don't set the temperature lower than needed.
- Don't store hot food or evaporating liquid in the appliance.
- Place the appliance in a well - ventilated and humidity moisture free room . Please refer to the "Installing your new appliance " chapter.
- If the diagram shows the correct combination of the drawers , crisper and shelves , do not adjust the combination as this is designed to be the most energy- efficient configuration.

### Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer , the internal temperature will rise, resulting in the compressor to work harder and consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Put the food in a proper place so that the air can circulate freely around.

### Hints for refrigeration

- Meat (All Types ) wrapped in polythene : wrap and place on the glass shelf above the vegetable drawer . Always follow food storage times and the "use by" dates suggested by the manufacturers.

- Cooked food, cold dishes, etc.:

They should be covered and may be placed on any shelf.

- Fruit and vegetables:

They should be stored in the special drawer provided.

- Butter and cheese:

Should be wrapped in airtight foil or plastic film

- Milk bottles:

Should have a lid and be stored in the door racks.

### Hints for freezing

- After starting up for the first time or stopping using for a period of time, let the appliance run at a higher setting for at least 2 hours before putting food in the compartment.
- Prepare food in small portions so that it can be frozen quickly and completely, and make it possible to unfreeze only the required amount later.
- Wrap up the food in aluminum foil or polyethylene food wraps which are airtight.
- Do not let fresh and unfrozen food come into contact with frozen food so as to avoid the latter's temperatures rising.
- If you eat iced products immediately after taking them out of the freezer, it is likely to cause you ice burns.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

### Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer.
- Once defrosted , food will deteriorate rapidly and should not be refrozen
- Do not exceed the storage period indicated by the food manufacturer .

**Switching off your appliance**

If the appliance needs to be shut down for a long time, the following steps should be taken to prevent the appliance from being moldy:

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly for air circulation.

## Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please refer to the following information.

**Warning!** Don't try to repair the appliance yourself. If the problem persists after you check the following, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace it if necessary.
	It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned.
	Some food, containers or wrapping cause odours.
Noise from the appliance	<p>The sounds described below are normal:</p> <ul style="list-style-type: none"> <li>•Compressor running noises.</li> <li>•Air flow noise from the small fan motor in the freezer compartment or other compartments.</li> <li>•Gurgling sound similar to water boiling.</li> <li>•Popping noise during automatic defrosting.</li> <li>•Clicking noise before the compressor starts.</li> </ul>
	<p>Other unusual noises are due to the reasons below and may require you to check and take action:</p> <ul style="list-style-type: none"> <li>•The cabinet is not level.</li> <li>•The back of the appliance touches the wall.</li> <li>•Bottles or containers falls or rolls.</li> </ul>
The motor runs continuously	<p>It is normal to hear the motor sound frequently and it is necessary for the motor to run more in following situations:</p> <ul style="list-style-type: none"> <li>•Temperature setting is set lower than necessary</li> <li>•A large amount of warm food has recently been stored in the appliance.</li> <li>•The temperature outside the appliance is too high.</li> <li>•Doors are left open too long or too frequently.</li> <li>•After you installing the appliance or it has been switched off for a long time.</li> </ul>
A layer of frost forms in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient

	ventilation. Ensure that door is fully closed. To remove the frost, please refer to the “Cleaning and care” chapter.
Temperature inside is too warm	You may have left the doors open for too long or too frequently; or the doors are kept open by some obstacles; or the appliance is located with insufficient clearance at the sides, back and top.
Temperature inside is too cold	Increase the temperature by following the “Display controls” chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.

## Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.


### Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

### Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard it with the mains plug

**Warning!** Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that the tubing of the refrigerant circuit is not damaged prior to proper disposal.

	Correct Disposal of this product
	<p>This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this the product is disposed of correctly, and you will help prevent potential negative impacts on the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more details about the recycling of this product, please contact your local council about your household waste disposal service, or the shop where you purchased the product.</p>

To avoid contamination of food, please follow the following instructions:

- Leave the door open for a long time can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly the surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in the suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three- star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[ °C]	Appropriate food
1	Fridge	+2~+8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, Drinks and other foods which are not suitable for freezing.
2	(**)-Freezer	≤-18	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 3 months – nutrition values and taste decrease with time), suitable for frozen fresh food.
3	***-Freezer	≤-18	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 3 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
4	** -Freezer	≤-12	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 2 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
5	*-Freezer	≤-6	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 1 month – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
6	0-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc.(Recommended to eat within the same day, preferably no later than 3 days).
7	Chill	-2~+3	Fresh/frozen pork, beef, fish, chicken, freshwater aquatic products, etc.(7 days below 0°C and above 0°C is recommended)

			for consumption within that day, preferably no later than 2 days ). Seafood ( lower than 0°C for 15 days , it is not recommended to store it above 0°C).
8	Fresh Food	0~+4	Fresh pork, beef, fish, chicken, cooked food, etc.(Recommended to eat within the same day, preferably no later than 3 days).
9	Wine	+5~+20	red wine, white wine, sparkling wine etc.

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for a long time , switch it off, defrost,clean ,dry, and leave the door open to prevent the mould from growing in the appliance.

**Water dispenser cleaning( for water dispenser products):**

- Clean water tanks if they have not been used for 48h; flush the water system which is connected to a water supply if no water has been pumped for 5 days.

**WARNING!** Food needs to be packed in bags before being put into the refrigerator , and liquids need to be packed in bottles or capped containers to avoid the problem that the designed structure of the product is not easy to clean.