


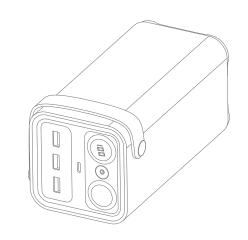

PORTABLE POWER STATION

便携式储能电源 EN1S




感谢您购买及使用本产品!为确保能为您的手机或电子产品提供更好操作体验,在阅读本说明书的同时也请参阅您的手机或电子产品的说明书。首次充电对产品电池性能至关重要,首次充电时,将产品连接电源插座,直到充满电为止。

名称	羽博便携式储能电源			
型号	EN1S			
电池能量	98Wh(TYP)			
电池容量	26.4Ah/3.7V			
产品规格	81x81x168mm(约)			
产品重量	1100g(约)			
总输入功率	45W			
输入Type-C	DC 20V=2.25A/15V=3A/12V=3A/9V=3A/5V=3A			
USB总输出功率	45W			
输出Type-C	DC 20V=2.25A/15V=3A/12V=3A/9V=3A/5V=3A			
输出USB-A1/A2/A3	DC 12V=1.5A/9V=2A/5V=2.4A			
AC输出	220V~50Hz 150W			
照明灯功率	1W			
执行标准	GB/T 35590-2017			

配件清单:

EN1S便携式储能电源 电源适配器 ×1 由于每个地区对配件需求不同,所以以上配件会有不同。若有疑问请联系羽博客服。

1乗TF 応い: 1技下按键开关,显示屏数字标识显示刺余电量。长按按键进入灯光模式,再按进入 SOS模式,任何者位长按按键退出灯光模式。 2使用ENIS的AC输出功能时,请打开插座开关(),连接上电器插头,即可正常通电使 用。使用结束后,请及时关闭插座开关(o),拔开电器插头,使用结束。

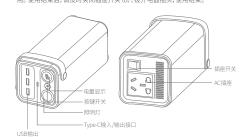

如何利用储能电源为其它设备充电:

USB端□: 智能手机、智能手表、数码相机、电子阅读器、平板电脑等。 Type-C端口:智能手机、手提电脑等。 AC输出端口:适用于220V~50Hz,功率小于或等于150W的电器。



充电状态: 给其他设备充电时: ■ 接入其他设备时,屏幕亮起并显示电量; ■ 电量指示灯熄灭,设备已充满电;

注 意:1.ENIS容量较大,用PD 45W快充满功率充满电需2.5小时左右,具体以实际为准.2. 若使用ENIS给设备充电时发现不能充电,请检查接线是否正常,牢固或充电接口配件是否合适。建议选用羽博或正规品牌电源适配器为 用于电域从化电路电路厂在自己或单数超离的电路等级上级组形电路中电路电路对 其充电。3.能能电源存在转轮效率。故储能电源各里不等同于可充容量。4.储能电源适合大部分手机充电,会出现不支持个别型号手机充电,这种情况本产品不在更换和保修范围。

警告:不遵循这些安全说明可能会导致起火、触电、损坏或其他伤害。

切勿摔碰、切勿自行拆开或刺穿ENIS;切勿將ENIS暴露在火中、高温中或水中;切勿用手或导电物(如铁丝、钉子、别针等金属制品) 去接触、探试电源插座内部;切勿用湿手触摸产品、切勿用湿布擦拭产品;电器使用完毕后应拔掉电器插头;如果发现ENIS有鼓胀等其他不良现象。或换充电设备有鼓胀等其他不良现象,请用户

此设备不适用于生理、感知和心智能力低下的人士(包括小孩),也不适用于缺乏相 关经验和知识的人士,除非有专门负责他们人身安全的人士监督或指导他们使用此设备。应当看管好小孩,以确保他们不将此设备当作玩具来玩。



保修条款

1.保修条件:本公司向羽博用户提供自产品购买之日起六个月的保修期。需要保修 服务时,请出示本保修卡,并请详尽填写相关内容。

2.保修范围:a、在正常使用的状态下出现的质量问题,非外力破坏造成的产品损坏; b、原则上不对尚在保修期内的产品收取维修费用,送修产品若遭人力损坏,将酌情 收取检测或等配件费用、经产品超出保修期的一律收取维修费。 c、产品维修期间,因无法使用该产品而造成的不便或损失,本公司均不承担任何责任。


3.以下情况不能享受保修服务:a、人为损坏。因使用不当造成的破坏、外观不正常磨 损、摔伤、电路烧毁、挤压变形、异物进入、受潮、产品上的密封标签被涂改或撕毁、 用户擅自拆装产品结构、使用不慎、操作不当、进水以及其他任何可见的人为损坏; b、因不可抗力因素造成的损坏。如地震、水灾、火灾、飓风或战争等。

产品中有毒有害物质或元素的名称及含量

	有毒有害物质或元素					
产品名称	铅(Pb)	汞(Hg)	镉(Cd)	六价络 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
EN1S	0	0	0	0	0	0
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 35590-2017标准规定的限量要求以下。						
X:表示该有害物质至:	少在该部件的基	(一均质材料中	的含量超出GB	3/T 35590-201	7标准标准规定	的限量要求。



PORTABLE POWER STATION

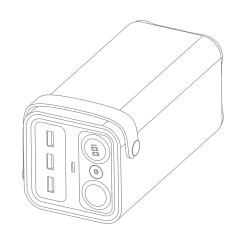


Thank you for purchasing and using this product!

Technical Specifications:

Product Name	Yoobao Portable Power Station		
Model	EN1S		
Battery Power	98Wh(TYP)		
Battery Capacity	26.4Ah/3.7V		
Size	about 81*81*168mm		
Weight	about 1100g		
Total Input Power	45W		
Type-C Input	DC 20V=2.25A/15V=3A/12V=3A/9V=3A/5V=3A		
Total USB Output	45W		
Type-C Output	DC 20V=2.25A/15V=3A/12V=3A/9V=3A/5V=3A		
USB-A1/A2/A3 Output	DC 12V=1.5A/9V=2A/5V=2.4A		
AC Output	220V~50Hz 150W		
Power of Light	1W		
Standard	GB/T 35590-2017		

Package List:

Operation Instructions:

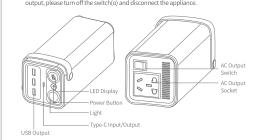

How to charge other devices with Yoobao Power Station:

USB Output: Smart Phones, Smart Watches, Digital Cameras, E-Readers, Pads. Type-C Output: Smart Phones, Laptops.

AC Output: Compatible with appliances which is 220V-5Hz and input ≤150W.

Power for Mini-Fridge(40W) about 2-25 hours	Power for 12V/5W LED Light about 16 hours	Power for 32 inches TV(60W) about 1.5 hours
USB Output Recharge	Recharge	

Charging Status:

Charging other devices:

The screen is on and shows the battery level.

The battery indicator light is off, the device is fully charged.

Charging EN1S:

The digital display indicator displays the current power level and flashing, EN1S is

being charged.

When the digital display indicator shows 100 and stops flashing, EN1S is fully charged.

Safety Information:

Warning: Not following the safety usage may cause fire, electric shock, damage to devices and injury to users.

Please don't drop, hit or puncture ENIS. Please keep ENIS away from fire, high temperature environr Please don't touch the product with wet hand or wet cloth. Please take off the appliance plug after usage.

Please cake on the appliance plug arter usage.

If any swelling or abnormal phenomenon happens on ENIS or the devices being charged, please cut off the power immediately and stop using.

This device is not applicable to people who have physical or mental issues, children and

those who are lack of the relavant knowledge and experience unless they are guided professionally. Children should be taken care of to make sure they don't use this device as a toy.

Warranty

Product Name:	Date of Purchaes:
Address:	
Remarks:	

Warranty Terms:

1.Warranty condition: We provide 6 months warranty for YOOBAO users from the date when the product is purchased. When applying for the warranty service, please show this warranty card and fill in the blank.

this warranty card and it in the blank.

2. Warranty scope: a Quality problems appeared on normally use or damages caused not by external force. b. In principle, we do not charge if products are under warranty period, but human damage will be charge accordingly. Products beyond warranty period, but human damage will be charge accordingly. Products beyond warranty period will be repaired at customers' expense. C. We are not responsible for the in convenien or loss caused by not being able to use the product during the repairing time.

3. The following circumstances are not under warranty conditions: a Artificial damages: improper use; product appearance worn abnormally, dropping: circuitry burned; squeeze; foreign matter enter into product, got damp; the seal label on the product has been changed or damaged; other obvious artificial damages. Other problems caused by customers such as dismounting the device, improper use and operation or products get wet. d. Damages caused by force majeure such as earthquake, flood, fire, hurricane and war.

Toxic material	s and co	ntent:				
	Toxic materials and conten					
Material Name	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
EN1S	0	0	0	0	0	0
O: means this toxi	c material n	neets the rec	uirements i	n standard G	B/T 35590-2	2017
X: means this toxic	: material de	oes not mee	t the require	ments in sta	indard GB/T	35590-2017







 \bigoplus