




GARETH  
ASHTON

[www.abey.com.au](http://www.abey.com.au)

## TAP INSTALLATION



GARETH  
ASHTON

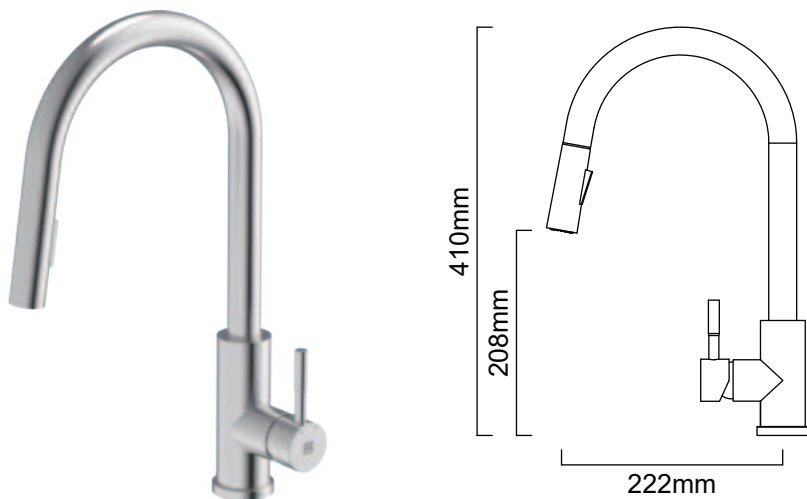

## Care and Maintenance

In order to ensure proper function over the lifetime of the tap, smoothly operate the handle and pull-out hand shower during use. When installing do not over tighten the locking nut. Regularly clean the tap with a soft, damp cloth and avoid abrasive cleaners, steel wool, and strong chemicals.

## Working Specifications

Working pressure: 20-100 psi

Working temperature: 1-60°C


This tap must be installed in accordance with the AS/NZS 3500 series standard. All Abey taps are strongly recommended to be installed by a licensed plumber. Improper installation may void the warranty.


## Notes

1. All pipework must be thoroughly flushed prior to installation as foreign materials may block the flow .
2. Aerator and the flow control can be removed with standard tool and cleaned.
3. If a screen-filter is fitted into the tap, remove it and flush the pipes and tap to remove grit. Then re-insert the screen.

## Parts List


- 1 Aerator
- 2 Pull out spray
- 3 Check-valve
- 4 Water-saving gasket
- 5 Snap buckle
- 6 Spout
- 7 Guide washer
- 8 O-ring
- 9 Guide sleeve
- 10 Guide nut
- 11 Tap body
- 12 Handle
- 13 Grub Screw
- 14 Rubber Cover
- 15 Decorative Cover
- 16 Locking Nut
- 17 Cartridge
- 18 Cartridge Base
- 19 Base ring
- 20 Triangle fixed seat
- 21 Steel washer
- 22 Rubber Gasket
- 23 Steel locking nut
- 24 Screws
- 25 Thread Tail
- 26 Quick-connect hose
- 27 Check-valve
- 28 Pull-out hose guide
- 29 Weight
- 30 Pull out hose
- 31 Water inlet hoses (H/C)

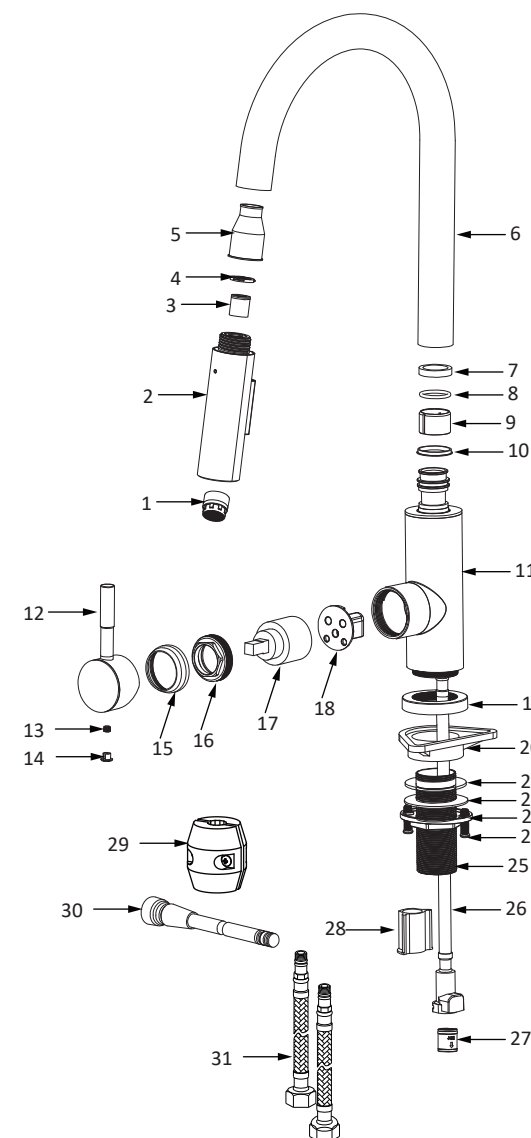

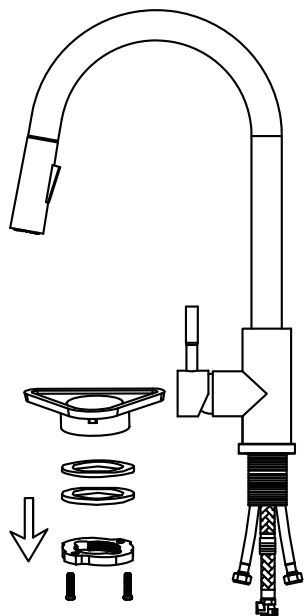


### Step 1

Remove Steel locking nut (23), washers (21,22) and Triangle fixed seat(20) when installed.

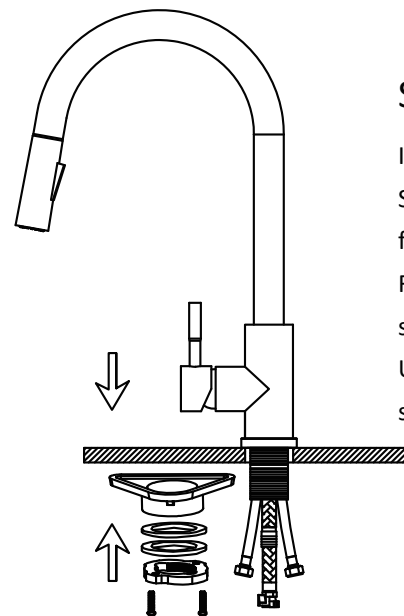


### Step 3

Install tap through center hole re-install Steel washer (21) and Rubber Gasket (22) followed by the Steel locking nut (23). Re-install hose connector if removed insuring small rubber washer is also installed. Using a screwdriver tighten the screws (24) so that the tap is secure and will not twist.

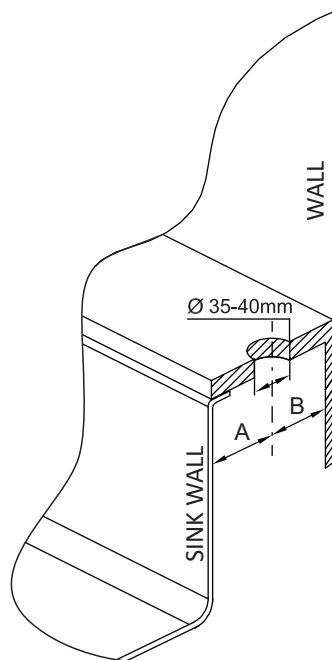


### Step 2

Locate a hole centre in the countertop at least 50mm from the wall and with enough clearance to the rim/flange of the sink. Dim. A >50mm(2") and Dim. B >50mm (2") . If you need to locate the tap within these dimensions, you should ensure enough clearance for the mounting washers and nut (20,21,22,23). Cut a hole 35 to 40mm diameter into the countertop .

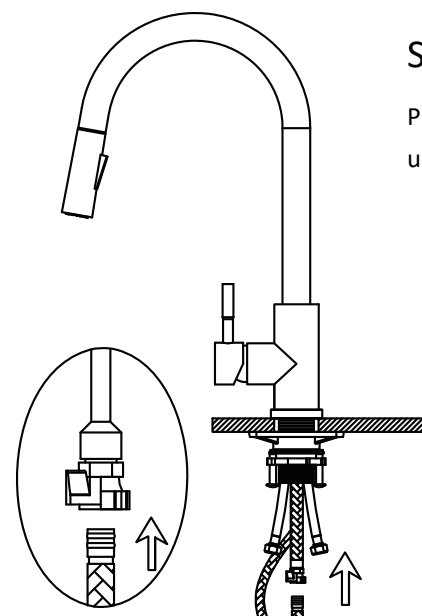


### Step 4

Push pull-out hose (30) in to the hose connector until you hear a click sound,

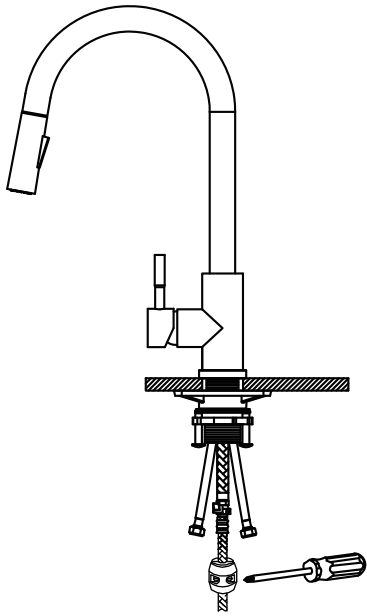


### Step 5

Proper installation of the hose weight kit (29) will ensure that the spray head retracts smoothly. On the spray side of the hose, measure 15" down from the body of the tap. Install the hose weight kit at this point. Pull out on the spray head. It should move easily and retract smoothly. Reposition the hose weight kit as necessary.

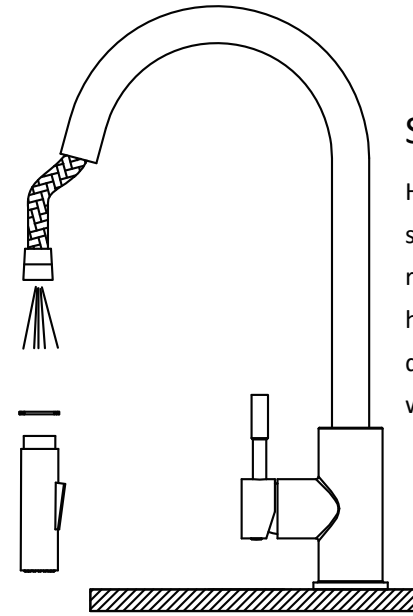

### Step 7

Hold on to the spray-head (2) hose unscrew spray head and remove it along with the rubber washer. Turn on the tap to flush the hose and feed line for 1-minute to flush debris. Turn off tap and re-install the rubber washer and spray head.

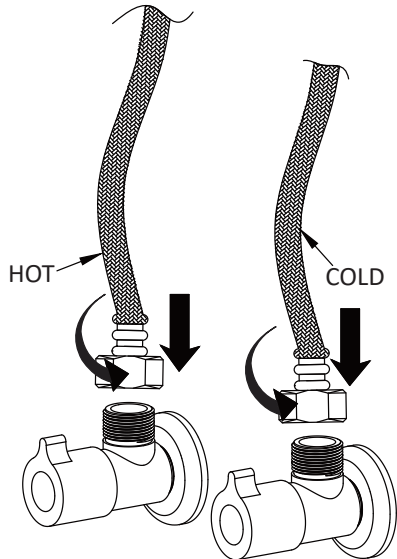

### Step 6

Flush the wall valves to ensure no grit enters the tap. Now attach the hoses to the wall valves ensuring the hose with RED braid attaches to the hot water outlet.

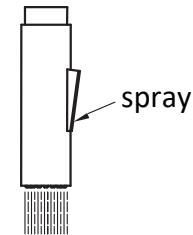


Figure 1

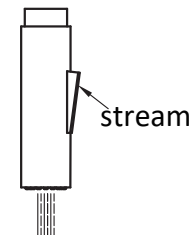


Figure 2

### Step 8

Turn the tap on and press the top of the spray (2) head button to change to Spray. (As figure 1)

Turn the tap on and press the bottom of the spray (2) head button to change to stream. (As figure 2)

## Troubleshooting

1. If water is leaking you should retighten the water inlet hoses (H/C) (31).  
It is possible that these connections have loosened when the water inlet hoses (H/C) are tightened to the wall valves.
2. If the water stream is uneven it is possible that debris or grit has blocked the aerator. You can remove the tip of the spout and backflush the aerator. Firmly retighten the retaining nut.
3. If the tap is loose or rotating at the base as it enters the countertop you should retighten the steel locking nut (23) ensuring the handle lever assembly is correctly positioned.
4. If the spout (6) is loose at the connection to the body (11) you may need to gently tighten the small grub screw. Do not over tighten the grub screw or the spout will not rotate.

---

## Warranty Information

All tap/faucet stainless steel casings are covered by a warranty limited to material and manufacturing defects for a period of 5 years. The tap/faucet hoses, inner cartridges, aerator, other exchangeable components are covered by a warranty limited to material and manufacturing defects for a period of 2 years from the date of installation.