



Oricom Video Baby Monitor Secure 870 with Lightshow

User Guide

KEEP THIS USER GUIDE FOR FUTURE REFERENCE

Always retain your proof of purchase in case of warranty service.
AUSTRALIA: www.oricom.com.au NEW ZEALAND: www.oricom.co.nz

Contents


Getting set up	3	Temperature	26
Learn about your menu	10	Cry Alerts.....	29
Learn about your Parent unit.....	12	Night vision	32
Learn about your Baby unit	13	Settings.....	33
Baby unit (camera)	14	Oricom Help.....	35
Using the Night Light	18	Help and troubleshooting.....	37
Using Lullabies	20	Guarantee and returns	39
Using the Lightshow	22	Express Warranty (Australia).....	40
Feed Timer	24		

Important safety notices

1. Your baby monitor is designed as just an aid. It is not a substitute for responsible and proper adult supervision.
2. Make sure all cables and units are out of your baby's reach – at least one metre away.
3. Never cover either unit, put them in moist places or inside the cot, bed or playpen.
4. If you travel abroad, check the voltage on your unit's plugs match the local power output.
5. Only use the battery supplied for the Parent unit. If you need to replace it, contact our Sales or Support Team.
6. Do not take the product apart. If you need repairs, get in touch with our Sales or Support Team.
7. The Baby unit might get warm after it's been on for a while. Don't worry – this is normal, and it's perfectly safe.

Getting set up

- 1 Place the charging cradle near a power socket in the room where you're going to be monitoring your baby most of the time. (Most people have their charging dock on a bedside table).

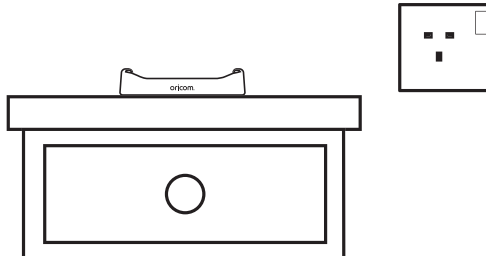

When does near become too far?

The maximum range between your Parent and Baby units is up to 300 metres, in optimum conditions, outdoors and up to 50 metres, in optimum conditions, indoors. Thick walls and doors reduce the units' range and affect how they link to each other.

4 Getting set up

Tips


You can also plug the power cable directly into your Parent unit without needing to use the charging dock.

You can also charge your Parent unit using other micro USB cables. This can be handy when you're away from home with your baby.

Note: these cables are not included but are available as optional accessories.

When your Parent unit charges while switched off, it turns itself off when fully charged. This means the battery icon goes off, too.

- 2 Plug the USB end into the charging dock, then plug the power plug into the power socket and switch the power on.

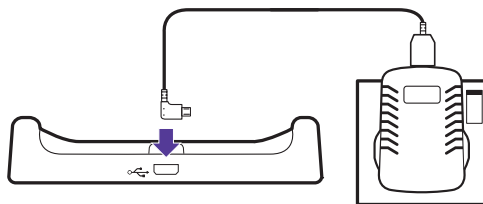


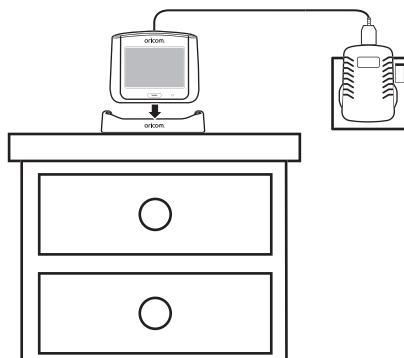
- 3 Pull the battery tab out of the Parent unit.




Important note about batteries

A fully charged Parent unit will last about 6.5 hours with normal use. To speed up charging, charge the Parent unit when it's switched off. You can also charge the Parent unit and use it at the same time, but it'll charge more slowly and take longer to fully charge. If the Parent unit battery is low with only about 30 minutes' charge left, you'll hear an alert tone. If this happens, put the Parent unit back on charge if you want to keep monitoring your baby.

- ④ Put your Parent unit on the dock to charge for at least five hours. You can tell it's fully charged when the  battery icon on the screen is solid green.



- 5 After the Parent unit has charged for five hours you're ready to set up your Baby unit (camera). To get the best performance, place your Baby unit between one and two metres away from your baby. If you like, you can also attach the unit to a wall*. See page 37 for how to do this. Make sure there's enough slack in the power cable so the Baby unit can pan freely. Possible note regarding wall mounting option may render projection not usable as will direct the projection at a wall or at babies cot/bed.

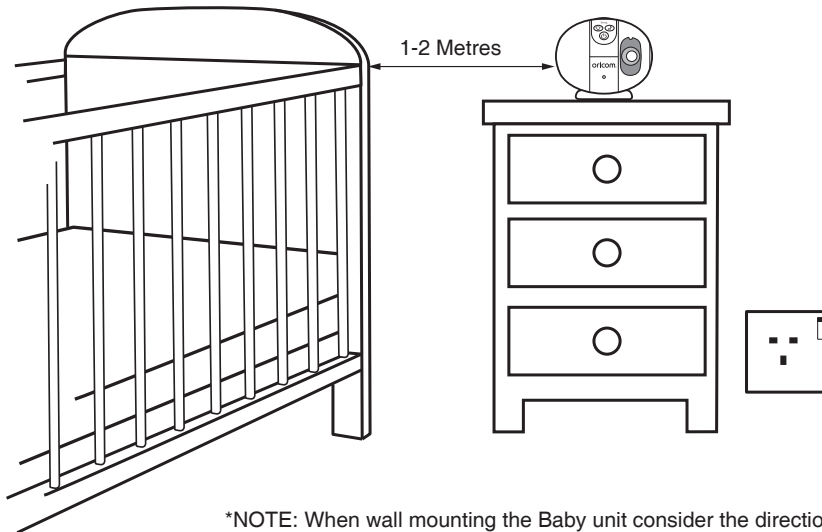

*NOTE: When wall mounting the Baby unit consider the direction of the Lightshow projection. For best operation point toward a surface 2-3 meters away (e.g. ceiling or nearby wall).

Tip

Point the Baby unit's camera to the centre of the mattress or playpen. You can always adjust this later.

Don't twist it

Don't twist your Baby unit by hand to change the camera view or angle. You might damage it.


Important note

The Baby unit might get warm after it's been on for a while. Don't worry – this is normal, and it's perfectly safe.


Important note about connections

If the Parent and Baby unit lose the link or connection between them, the link light will flash and the screen will say the link is lost, and is trying to reconnect. If after 30 seconds there's still no link, you'll hear an alert tone from the Parent unit. First, check on your baby and then follow the steps from step 7 again to set up the link again.


- 6 Using your power adaptor cable, plug one end into the power plug on the Baby unit (Camera) and plug the power plug into the power socket and switch the power on.

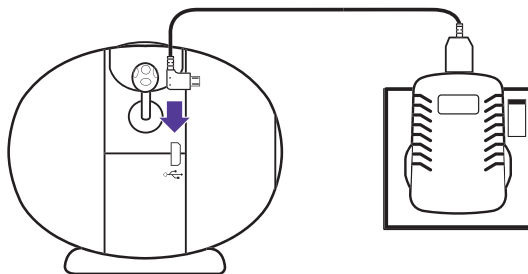

- 7 Press and hold the power button for a two - three seconds. The link light will flash green and the night light will light on and off.

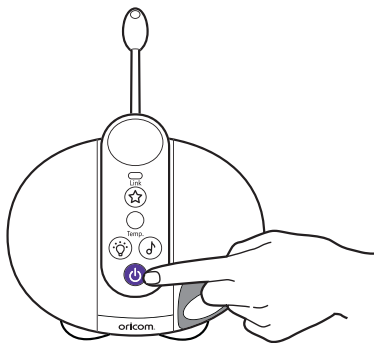

- 8 Press the power button to switch on your Parent unit. The Parent and Baby unit will link automatically and the Baby unit's link light will turn solid green.

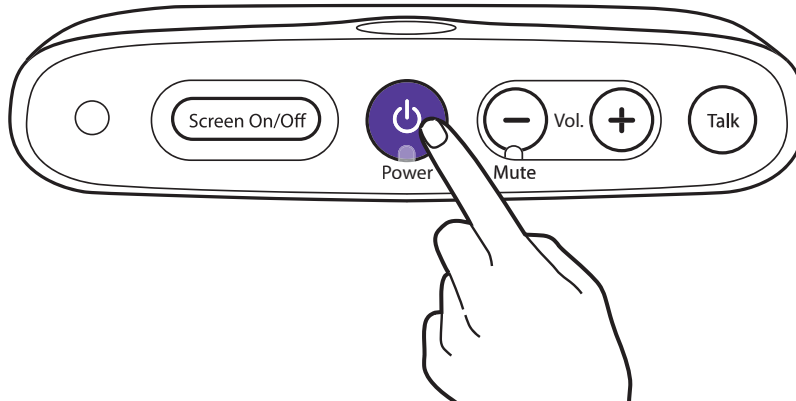

The first time you switch on your Parent unit, a set-up wizard asks you to set the time and then shows you all your baby monitor's features.

If you want, you can skip through the set-up wizard by tapping the screen or tapping **Exit**, when shown.

When you exit the set-up wizard, the Parent unit will show you the live view from the Baby unit and you're all set up!

Tip

If you ever want to watch the set-up wizard again, tap Menu and then Oricom Help, then Introduction.

Learn about your menu

Using your baby monitor

This will show the strength of your connection between the Parent and Baby unit.

Quick access menu for Night Light, Lullabies and Lightshow

More on page 18-23.

Time

You can set this in Settings.

More on page 34.

How do I leave the menu?

Press .

Feed Timer

Set reminders for feeding time.

More on page 24.

Temperature

The temperature of the room the Baby unit is in.

Get alerts on changes of temperature.

More on page 26.


Baby unit (camera)


Name your camera or pair additional cameras.

More on page 14-15.

Sound level indicator

This is on the left of the screen and shows you the level of noise in your baby's room.

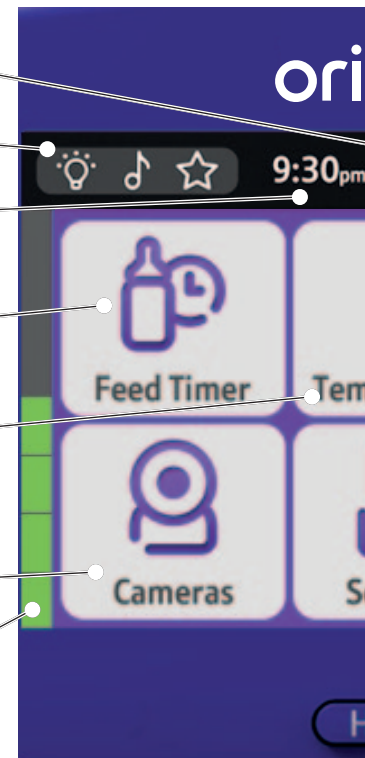

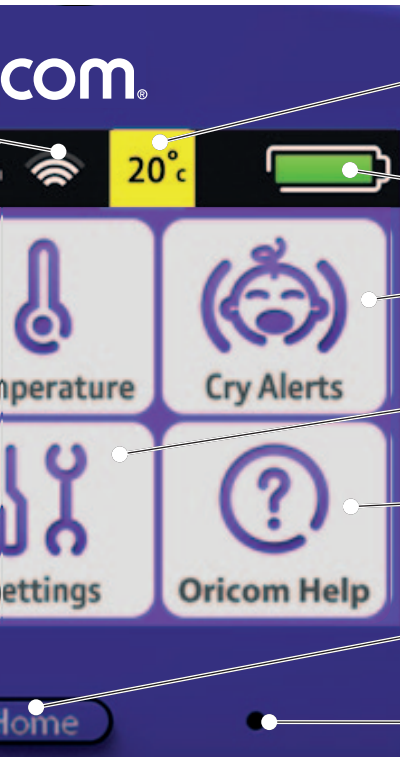**Temperature at Baby unit**

This changes colour as the temperature changes – light orange is the optimum temperature, blue too cold, dark orange too warm and red too hot.

More on page 26.

Battery level

More on page 6.

Cry Alerts

Hear when your baby's crying.

More on page 29.

Settings

Set tones, backlight and time.

More on page 33.

Oricom Help

See the set-up wizard, reset settings and how to get more help.

More on page 35.

Home

Returns to the live video from your Baby unit. Tap the screen anywhere to go to the menu.

Mic

Microphone – speak into this when you want to talk to your baby using the Baby unit.

More on page 12.

Learn about your Parent unit

Tips about talking


You can talk to your baby using the Parent unit. Hold or have the Parent unit about an arm's length away when using it to talk to your baby – and take care not to put your thumb over the microphone. And remember, while you're talking, you won't be able to hear your baby.

Screen On/Off

Press **Screen On/Off** to turn your Parent unit screen on and off (sleep). Audio remains active when the screen is off.

Volume

Press **Vol. +/-** to increase or decrease volume. To mute, press **Mute** until the Mute light comes on. Remember, you won't hear your baby through the Parent unit if you mute the volume.

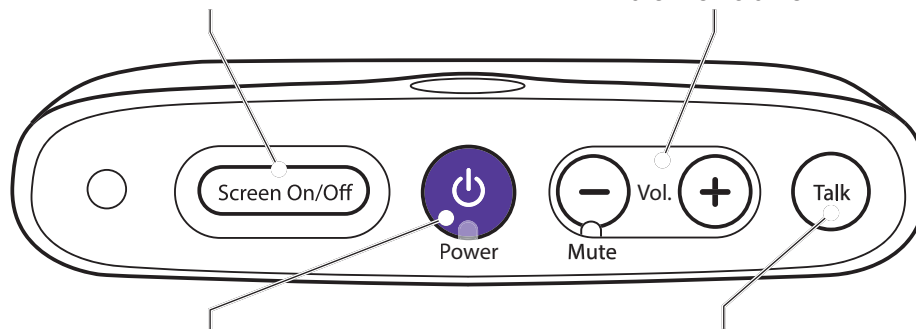


Power

Press and hold **Power** for two - three seconds to turn your Parent unit on and off.

Talk

Press and hold **Talk** to talk to your baby through the Parent unit.


Learn about your Baby unit

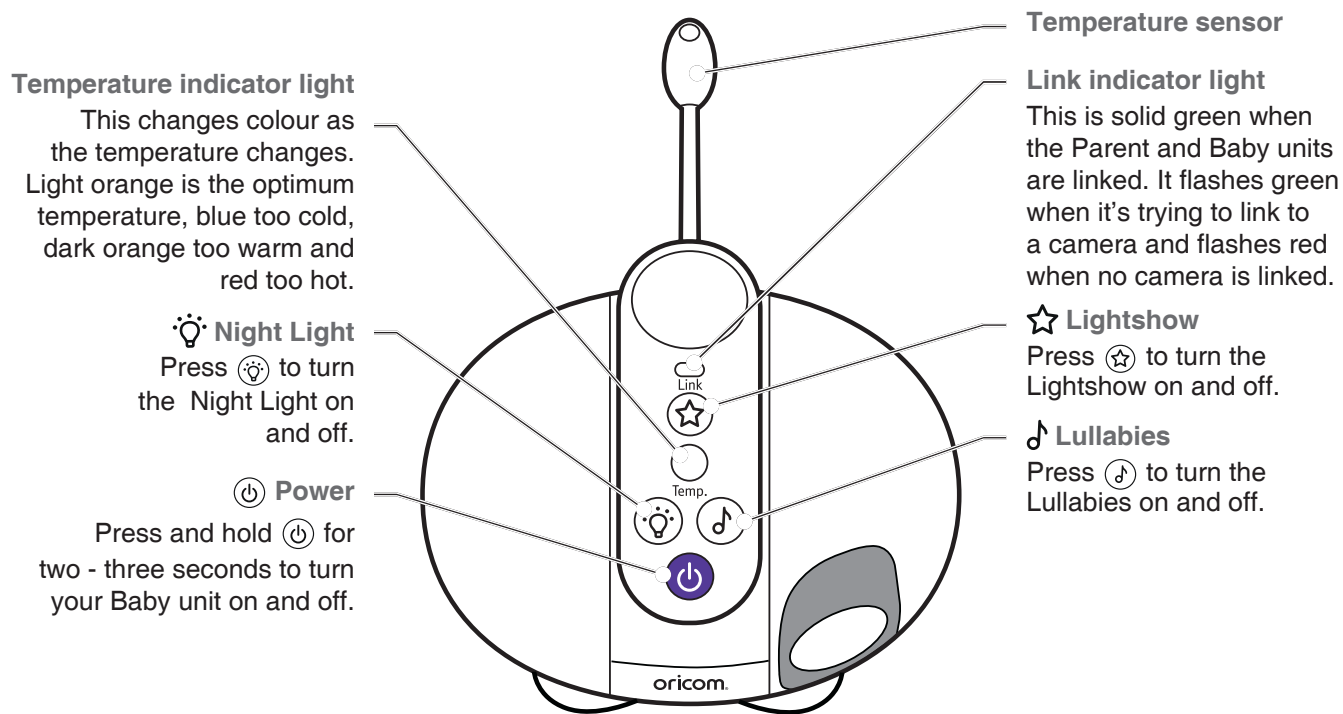

Baby unit (camera)

How to name your camera

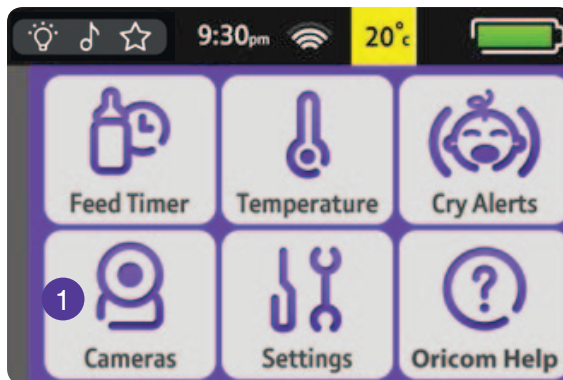

- 1 To change your camera name, tap **Cameras**  and then **Rename?**







- ② Enter your baby's name (up to eight characters) and tap **Save**.




How to pan, tilt and zoom your camera

To zoom a camera, tap the screen and the  and  will appear. Tap these to zoom in and out.

To pan or tilt a camera, tap the screen and     will appear.


Tap  and  to tilt your camera up and down.

Tap  and  to pan your camera left and right.

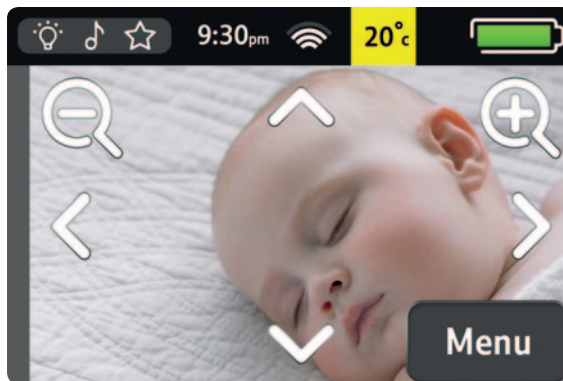

How to register additional cameras



- 1 Go to camera menu on the parent unit and then select the camera you want to pair.

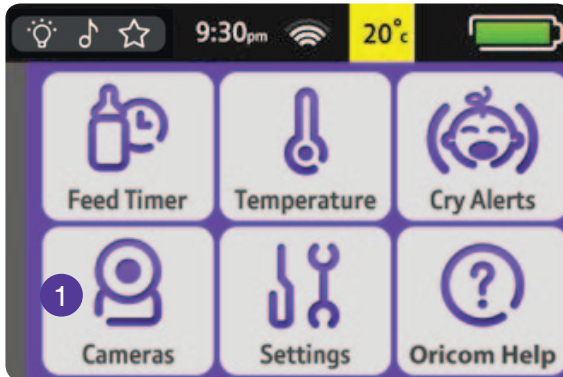


- 2 Follow the on-screen instruction to turn on the baby unit and then press and hold the night light button on baby unit for 10 seconds.


Using the Night Light

A gentle night light in your baby's room can give your baby comfort.


- 1 Tap the quick access menu    .



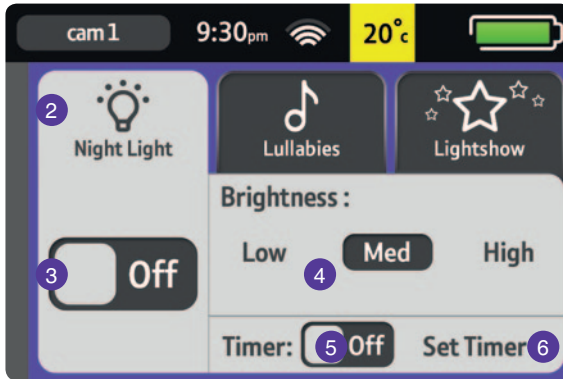

- ② Choose the Night Light tab.
- ③ Tap to turn your Night Light on/off. (The  will glow yellow on the quick access menu when you return to the home screen.)
- ④ There are three brightness settings for the Night Light. Tap how bright you want your Night Light.
- ⑤ Tap to turn the timer on/off.
- ⑥ Tap to set your timer. To choose how long the light stays on, press **Set Timer** and then tap + or -.
- ⑦ If you want to go back and adjust your Night Light's brightness, tap **Hide Timer**.

Tips

You can also turn the Night Light on/off on the Baby unit – just press the  button.


If you turn off your Baby unit, any Night Light settings will be saved on your Parent and Baby unit.

Using Lullabies

Music can entertain your baby or help them drift off to sleep. You can choose from Lullabies, Classical, Nature Sounds and White Noise.

- 1 Tap the quick access menu    .



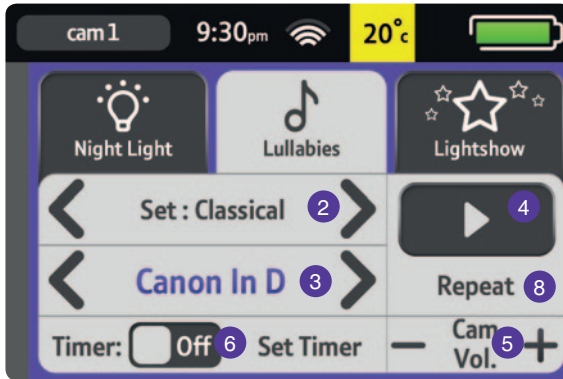


- 2 Tap either arrow to scroll and choose the type of music you want from lullaby, classical, nature or white noise.
- 3 Tap either arrow to choose the track to play.
- 4 Tap to play the track.
- 5 Tap to adjust the Baby unit (camera) volume.
- 6 Tap to turn the timer on/off. When on, you'll see a timer icon on the Lullabies tab and quick access menu.
- 7 Tap to set your timer. Then tap the + or - to set how long the music plays. You can change timer settings whilst a track is playing.
- 8 Tap to set the track to keep repeating. If the track isn't set to repeat, the other tracks within that type of music will play.



Tips

If you turn off your Baby unit, any lullaby settings will be saved on your Parent and Baby unit.

You can also turn Lullabies on and off on the Baby unit – just press the  button.


Using the Lightshow


Your baby monitor has a soothing lightshow to help calm your baby and get them to sleep.

- 1 Tap the quick access menu    .




If the camera unit has been wall mounted the lightshow feature will not project onto the ceiling but onto a wall. Placing the Baby unit on a flat surface 1-2 meters from the cot is recommended for best results when using the lightshow.

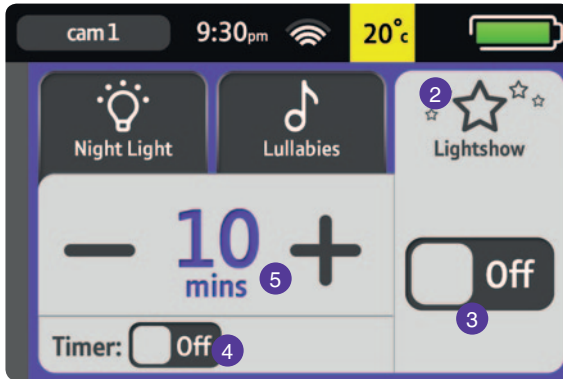

- ② Tap the **Lightshow** tab.
- ③ Tap to turn your lightshow on/off. When on, the  on the Lightshow tab and the quick access menu will glow.
- ④ Tap to turn the timer on/off.
- ⑤ Tap to set your timer. Then tap the + or - to set how long the lightshow stays on. You can change timer settings while the lightshow's on.

Tips

You can also turn the lightshow on/off on the Baby unit – just press the  button.

If you turn off your Baby unit, any lightshow timer settings will be saved on your Parent and Baby unit.

Note

The lightshow will turn off automatically after 2 hours.

Feed Timer


Tip

If you just start your feed timer without changing any settings, its default setting is to alert you in two hours. The maximum alert time you can set is for an alert in nine hours and 59 minutes.

How to set reminders for feeding time

Babies like regular feeding times and a bit of routine. Your handy baby monitor can remind you of feeding times.

- 1 In Menu, tap  **Feed Timer**.

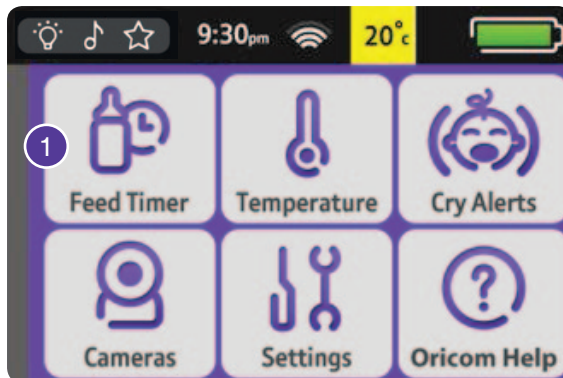



- 2 Tap when you want feed timer alerts.
- 3 Choose and tap the kind of alert you want.
- 4 Tap **Start**. When your feed timer is on, the numbers showing the time glow green. You can also see a countdown to the next alert on the home screen.
- 5 Tap to set the timer to keep repeating and reminding you of the next feeding time.

You will hear two beeps when the feed timer finishes. Tap the feed timer numbers on the home screen to dismiss this alert and take you to the feed timer menu. If you have set the timer to repeat, it will restart timing automatically from the moment you dismiss the alert.

Important

If you turn off your Parent unit, you'll need to restart your feed timer when you turn it on again. Length and frequency settings for alerts aren't affected by turning off the Parent unit.

More than one alert?

You'll always see the latest alert on the screen. If you dismiss the latest alert, you'll then see any previous alert.

Temperature

Important

The Baby unit's thermometer is accurate to +/- 1°C.

Default settings

The Baby unit's default setting for temperature alerts is 15°C (and below) and 30°C.


What happens if I reset the Parent unit?


All temperature displays and indicators will go back to default settings.





How to change the temperature alert settings

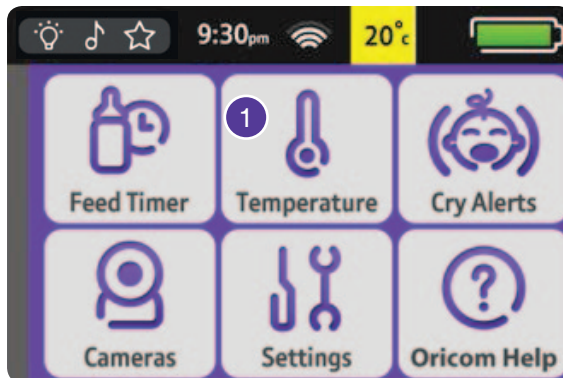Make sure your baby's room is at a comfortable temperature. Your handy baby monitor will let you know if it's getting too hot or too cold.

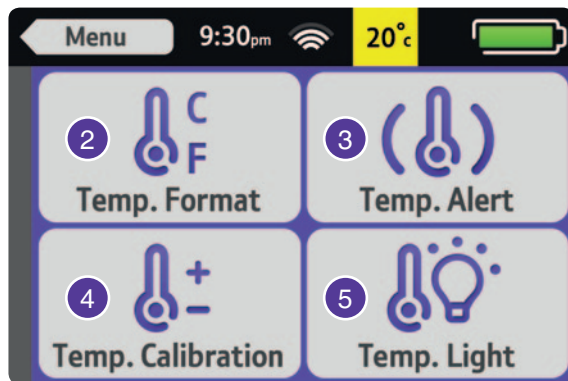- 1 In Menu, tap  Temperature.





- 2 Tap  if you want to change how you want your baby's room temperature displayed (i.e. in Celsius or Fahrenheit). Its default is Celsius.
- 3 Tap  to turn off alerts or set the kind of alert you want.
- 4 Tap  if you want to adjust the temperature displayed. For example, you might want to do this if there's a slight difference in temperature between what's showing on the Parent unit and your central heating thermostat or other device.
- 5 Tap  if you want to turn the Baby unit's temperature indicator light on or off.

What happens if there's more than one alert?

You'll always see the latest alert on the screen. If you dismiss the latest alert, you'll then see any previous alert.


Note

If the alert is set to screen only, the screen will come on if the Parent unit is in sleep mode.

Note

A Too Warm alert will stop automatically after 30 seconds.

During an alert, tap **Dismiss** to stop it or **Settings** to change it.

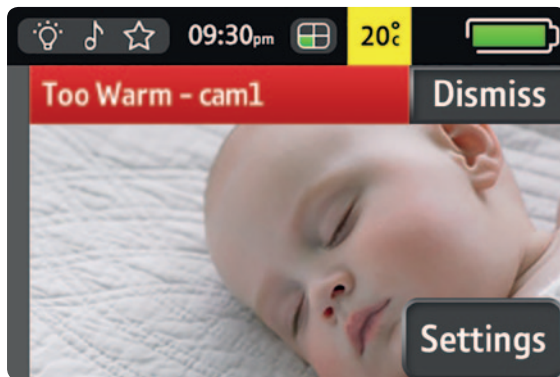

Cry Alerts

How to know when your child is making a sound

Babies make all sorts of sounds, from gurgling and snuffling to chatting and crying. Cry alerts do exactly as they say. They won't alert you to every little snuffle, but only when your child is making a loud noise. A cry alert only sounds when the Parent unit is on mute.

- 1 In Menu, tap  **Cry Alerts**.




Important

If the screen's off or in sleep mode, it'll come on when there's a cry alert. If your baby settles, a cry alert will stop automatically after 30 seconds.

What happens if there's more than one alert?

You'll always see the latest one on the screen. If you dismiss the latest alert you'll see the previous one.

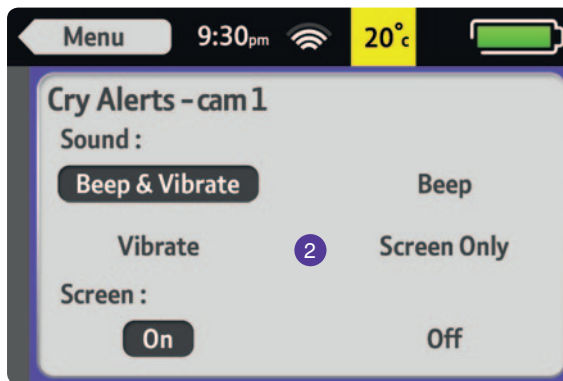

2 Tap the kind of alert you want.

During an alert, tap **Dismiss** to stop it or **Settings** to change it.




If the screen alert is set to off, press any button on the Parent unit to dismiss the alert.

Night vision

The Baby unit has a night vision mode that allows you to monitor your baby in dark rooms. The Baby unit has infrared LEDs that are invisible to your baby so they don't disturb or distract them.


The night vision mode will automatically turn on when the ambient light drops and the room becomes dark. The picture will turn to a black and white image.

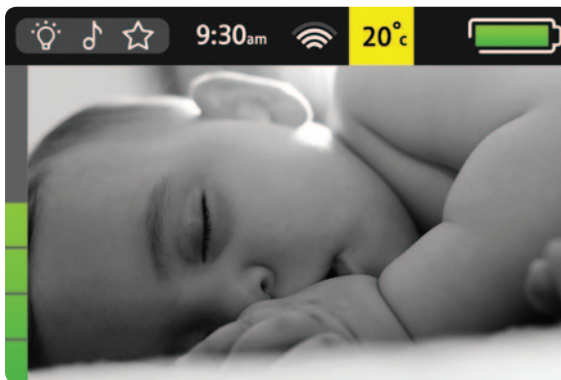



The night vision works best when the Baby unit is placed between 1 and 2 metres from your baby (or ideally <3.5m from your baby). Any further away and the image will not be as clear.





How to set key tones, backlight and time, and calibrate screen

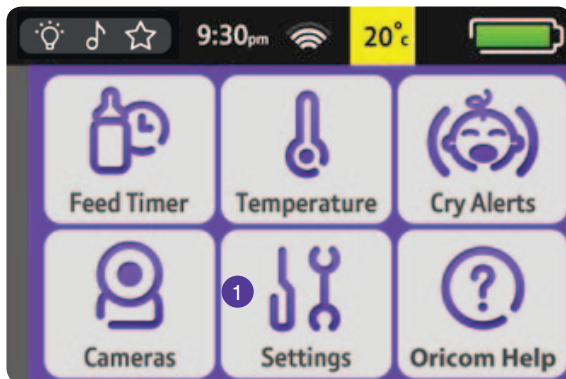All your main baby monitor settings are in one handy place on your Parent unit.

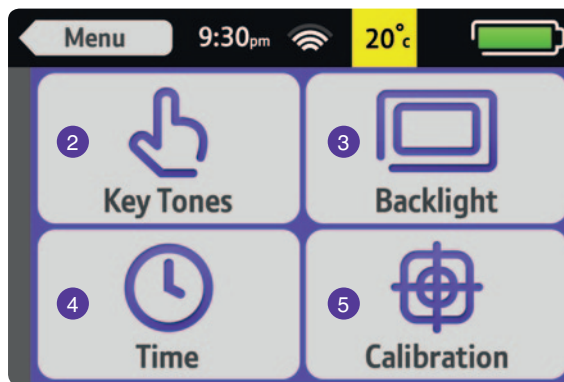- 1 In Menu, tap  **Settings**.






- 2 Tap  to set the sound or vibration you'd like when you tap your screen.
Key Tones
- 3 Tap  to set how bright you'd like your screen. The default setting is for the Parent unit to automatically adjust brightness depending on the ambient light. There are five different levels of brightness, if you want to set this manually.
Backlight
- 4 Tap  to set the time.
Time
- 5 Tap  to calibrate your screen. (You'll see arrows around the screen when it needs calibrating, otherwise you shouldn't need to calibrate it.)
Calibration




How to see the set-up wizard, reset settings and get help

There's lots of help, if you need it.

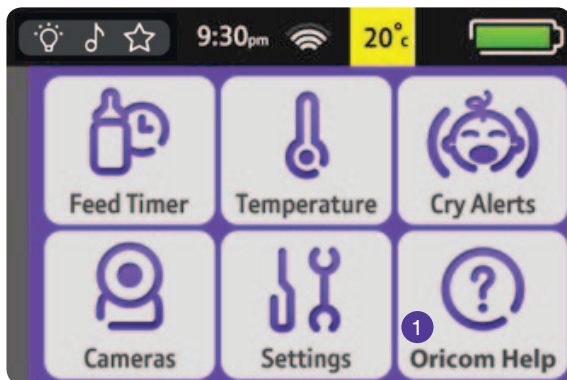- 1 In Menu, tap **? Oricom Help**.





- ② Tap  to see the set-up wizard.
- ③ Tap  to reset your Parent unit to its factory settings.
- ④ Tap  for the Oricom Help Desk contact information.

Help and troubleshooting

If you have any problems setting up or using your baby monitor, see if these common questions can help.

How long does the Parent unit battery last?

A fully charged Parent unit will last about 6.5 hours with normal use. To speed up charging, charge the Parent unit when it's switched off. You can also charge the Parent unit and use it at the same time, but it'll charge slower and take longer to fully charge.

How do I replace the battery?


You should only use a Lithium 3.7V 2500mAh 9.25Wh battery from our helpdesk. Call us on 1300 889 785 when you need to replace it. When you get it, take off the battery compartment cover and pull the tab inside to get the old battery out. Then insert your new battery and put the cover back on.

How do I attach my Baby unit to a wall?

You get some screws and plugs with your baby monitor.

Here's what to do.

1. Make sure the wall can support the Baby unit.
2. Make sure the power plug can reach the power socket.
3. Check that you aren't drilling into any hidden wiring or plumbing. Oricom isn't responsible for any damage or injury caused while trying to wall mount your Baby unit.
4. Use a pencil to mark where you want your Baby unit.
5. Check the reception strength of the Baby unit and its camera angle before drilling two 5mm holes, 37mm apart.

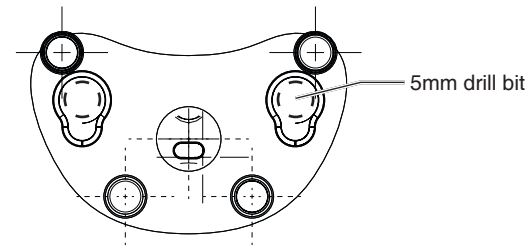

My Parent/Baby unit isn't working. What should I do?

Check that:

1. power cables are plugged in and switched on at the wall socket
2. batteries are installed correctly and fully charged
3. the units are turned on
4. the Parent unit isn't too far from the Baby unit(s) (large obstructions or other electrical devices might affect the signal between the Parent and Baby unit).

Sometimes unplugging the power cables, waiting about 20 seconds, and then plugging them back in can help. If you do this, you'll need to allow about a minute for Parent and Baby unit(s) to link.

My Parent/Baby unit is making a high-pitched noise.



What should I do?

They might be too close together. Make sure they're at least 2-3 metres apart.

How do I reset my Parent unit?

In Menu, tap Oricom Help then tap Factory Reset.

How do I reset my Baby unit?

Within three seconds of the Baby unit starting, press and hold down the  and  buttons for about five seconds.

Why is my Parent unit beeping?

The Parent unit beeps when:

- your units aren't linking – see page 9.
- there's a problem with mains or battery power
- a cry alert is switched on – see page 31.

How do I pair the Parent unit to a camera?

- select the camera menu
- select which camera you need to pair
- the on-screen instruction will ask you to turn on the camera and press and hold down the night light button.

Cleaning

The Oricom SC870 has a durable plastic casing that should keep their colour and finish for many years. To clean, use only a soft cloth slightly dampened with water or a mild soap. Do not use too much water or cleaning solvents.

Storage:

- Keep in cool dry place, in original packaging or box for best protection.
- Do not wind cords around devices, loop together and bundle with elastic band or suitable cable tie.
- Remove battery for prolonged storage. Test and charge on annual basis.

Express Warranty (Australia)

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

Nothing in this Express Warranty excludes, restricts or modifies any condition, warranty, guarantee, implied term, right or remedy pursuant to the Australian Consumer Law and which may not be so excluded, restricted or modified. For such conditions, terms, guarantees and warranties that cannot be excluded, restricted or modified, Oricom limits the remedies available to extent permitted in the relevant legislation.

The Express Warranty Period will be 3 years from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period.

This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer.

During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Wilful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 1300 889 785 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email or fax a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the goods for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

ORICOM CUSTOMER SUPPORT

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

1300 889 785

Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au

www.oricom.com.au

Oricom Support - New Zealand

0800 674 266

Monday - Friday 11am - 7pm NZST

Email: support@oricom.co.nz

www.oricom.co.nz

